



Movano

Infotainment System

Contents

Touchscreen audio system	5
Audio system	19



Touchscreen audio system

Introduction	6
Basic operation	10
Audio	12
Navigation	14
Speech recognition	16
Phone	17
Index	18

Emergency numbers		
For emergency service call the Vauxhall Incident Manager		0800 55 33 88 (Free Linkline)*
Vauxhall Assistance General Enquiries		0845 7565 565
You will need to provide:	Vehicle registration number	Model and colour of your Vauxhall
	Contact telephone number	Details of your precise location

* Calls may be chargeable from mobile phones

Introduction

Notice

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to this vehicle due to model variant, country specifications, special equipment or accessories.

Important information on operation and traffic safety

Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:






- changes in distance from the transmitter
- multipath reception due to reflection
- shadowing

Introduction

Control panel






8 Introduction




- 1 
Press: switch power on / off.
Rotate: adjust the volume.
- 2 
Activate or deactivate the mute mode.
- 3 
Switch the screen on / off.
- 4 
Open the settings menu.
- 5 
Open the previous screen / menu.
- 6 **BROWSE / ENTER**
Press: confirm a selection.
Rotate: select the previous / next radio station or track.

- 7 **MORE**
Open the menu for the trip computer and display the time, outside temperature and a compass.
- 8 **PHONE**
Open the phone screen.
- 9 **NAV**
Open the navigation screen.
- 10 **MEDIA**
Open the media screen.
- 11 **RADIO**
Open the radio screen.

Steering wheel controls



-  : Activate or deactivate the mute mode or pause the media.
- During a phone call:
deactivate or activate the microphone.
-  : Toggle up or down: adjust the volume.
-  : Activate or deactivate the voice recognition for radio or media functions or stop a voice message to start a new voice command.

-  : Accept an incoming call or accept a second incoming call and put the active call on hold.
Activate or deactivate the voice recognition for the phone function or stop a voice message to start a new voice command.
-  : Toggle up or down: select the previous / next radio station or track.
Toggle up or down continuously: scan the radio frequencies or fast-forward / rewind the media until the button is released.
-  : Refuse an incoming call or hang up an active call.

Basic operation

Screen operations


The display of the Infotainment system has a touch-sensitive surface that allows direct interaction with the displayed menu controls.

Caution

Do not use pointed or hard items like ballpoint pens, pencils or similar for touchscreen operation.


Use the following finger gestures to control the Infotainment system.

Touch

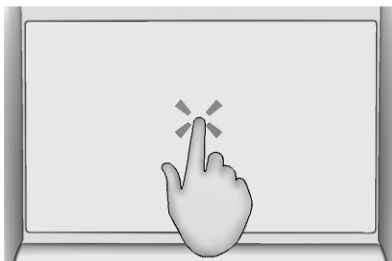

Touch is used to open a menu or select an option.

Touch and hold

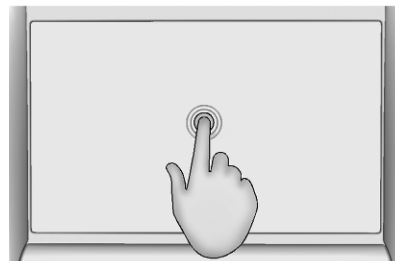

Touch and hold can be used to save radio stations.

Scrolling through a menu

To scroll through a menu, touch ▲ or ▼.

Returning to the previous screen

To return to the previous screen, touch ◀ in the upper left corner of the screen.


Returning to the radio / media screen

To return to the radio / media screen, touch ✕.

Adjusting settings

Some setting submenus include the following buttons: **+**, **-**, **▲** and **▼**. Touch them to adjust a corresponding setting.

System settings

To display the system settings menu, press .

Submenus are available for the following topics:

- **Display:** Adjust the display brightness, set the display mode, set the display language, set the units, activate or deactivate an audible signal for touchscreen operation and display Trip B on the screen.
- **Voice commands:** Set the length of the voice system responses and display suggestions with different options during a voice session.
- **Time / date:** Set the time and format, activate or deactivate the digital clock in the status bar, activate or deactivate the automatic time and set the date.
- **Safety / assistance:** Display the rear view camera in reverse gear and maintain the screen of the rear view camera for a maximum of 10 seconds or up to 8 mph, adjust the front collision warning and the blind spot alert and set the trailer length.
- **Lights:** Set the sensor sensitivity and activate or deactivate the high beam assist.
- **Doors / locks:** Activate or deactivate the automatic locking of the doors when the vehicle is moving.
- **Vehicle off options:** Adjust the time for the automatic radio switch-off after the engine has been switched off.
- **Audio:** Adjust the equaliser, balance / fade, volume / speed, loudness, set the automatic radio switch-on when starting or recover the active state when the vehicle was last switched off and activate or deactivate the automatic playback of media.
- **Phone / Bluetooth:** View a list of paired Bluetooth devices and add or delete a Bluetooth device.
- **Radio setup:** Activate or deactivate traffic announcements, alternative frequency, regional mode, DAB announcements and select the announcement categories.
- **Restore settings:** Restore the default settings of the screen settings, clock settings, sound settings and radio settings.
- **Clear personal data:** Delete personal data, Bluetooth devices and built-in presets.

Audio

Radio screen

Press **RADIO** to open the radio screen.



Switching the radio stations

Touch **▶▶** briefly to perform an automatic search for the next radio station.

Touch and hold **▶▶** to perform a quick search for the next radio stations.

Touch **◀◀** briefly to perform an automatic search for the previous radio station.

Touch and hold **◀◀** to perform a quick search for the previous radio stations.

Saving radio stations

Saved radio stations will be displayed in the top line of the radio screen. Touch the desired radio station to tune in.

To open a list of all saved radio stations, touch the button on the right end of the top line. Each button in the list can be used to save the current radio station.

To save a radio station, touch and hold the desired button. Buttons which are already used for radio stations can be overwritten.

Radio settings

The audio settings and the waveband can be adjusted via the buttons in the bottom line of the radio screen.

Additionally, the available radio stations can be sorted by categories and information about the current radio station can be displayed.

Media screen

Press **MEDIA** to open the media screen.



Playing audio files

Touch **▶** to play back or pause.

Touch **▶▶** briefly to play the next track.

Touch and hold **▶▶** to fast-forward the currently playing track.

Touch **◀◀** briefly to play the previous track.

Touch and hold **◀◀** to rewind the currently playing track.

Media settings

The audio settings, the audio source and further settings can be adjusted via the buttons in the bottom line of the media screen.


Additionally, all audio files can be sorted by categories and information about the currently playing track can be displayed.

Navigation

Navigation system

Press **NAV** to open the navigation screen.

The terms and conditions need to be accepted when starting the navigation system.

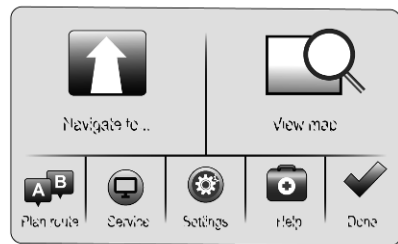

Starting a route guidance

To start a route guidance, touch the navigation button on the navigation screen.

To enter an address directly, open the address menu. The postal code, the street name and the house number can be entered.

Alternatively, the home address, a point of interest, a recent destination or a favourite destination can be selected.

Active route guidance

During an active route guidance, the estimated time of arrival, the remaining time and the next driving manoeuvre will be indicated in the bottom line of the navigation screen.

To listen to a voice prompt of the next driving manoeuvre, touch the display indication of the driving manoeuvre.

To display more details about the route, touch the display indication of the estimated time of arrival. The entire route will be displayed. The route can also be changed.

By touching the details button on this screen, a further menu will be displayed to view more information about the route, e.g. a route summary, traffic on the route and the following driving

manoeuvres. Also further settings can be adjusted, e.g. points of interest on the map.

Services

To activate or deactivate RDS traffic or the speed camera function, if available, open the services menu of the navigation screen and open the corresponding submenu.

Settings

To adjust the navigation settings, open the settings menu on the navigation screen. The following settings can be adjusted:

- day or night mode
- activation of voice guidance and voice settings
- favourite destinations
- home address
- safety settings
- map settings
- points of interest on map
- navigation updates

- units and keyboard
- reset the factory settings

Map updates

To install a map update, proceed as follows:

1. Use an empty USB device with at least 16 GB memory and FAT32 formatting.
2. Install TomTom HOME on a computer and create a MyTomTom account.
3. Download the map data and save it onto the USB device.
4. Connect the USB device with the Infotainment system and follow the steps on the screen.


The updating process will take at least 30 minutes. Do not remove the USB device or turn off the system until the update has finished. The system cannot be used until the update has finished.

Help

To learn more about the navigation system or to view further information and instructions, open the help menu on the navigation screen.


Speech recognition

Activating speech recognition for radio and media functions

Press  on the steering wheel to start a speech recognition for radio or media functions.

Some example voice commands will be displayed on the Info Display.

Activating speech recognition for phone functions

Press  on the steering wheel to start a speech recognition for phone functions.

Some example voice commands will be displayed on the Info Display.

Phone

Bluetooth connection

Press **PHONE** to open the phone screen.



Once a mobile phone is connected to the Infotainment system, the following functions are available via buttons on the phone screen:

- display the contact list
- display a list of the recent calls
- display text messages
- dial a telephone number

Pairing a mobile phone

To pair a mobile phone, open the settings menu on the phone screen.

A list of all paired mobile phones will be displayed. Touch the corresponding button on the left screen side to pair a new mobile phone.

Once the mobile phone is successfully paired, it will be connected automatically and shown as connected.

Connecting and disconnecting a mobile phone

Only paired mobile phones can be connected to the Infotainment system.


To connect or disconnect a mobile phone, open the settings menu and select the desired mobile phone. The selected mobile phone can be connected, disconnected or deleted.


Making a call

To make a call, choose one of the contacts from the contact list, dial a telephone number via the keyboard or select a number from the recent calls list.

Receiving a call

An incoming call is announced by a ring and a message on the Info Display.

To accept an incoming call, touch the corresponding button on the Info Display or press  on the steering wheel.

To refuse or hang up the call, touch the corresponding button on the Info Display or press  on the steering wheel.

Index

A		S	
Audio.....	12	Sound settings.....	12
Audio settings.....	12	Speech recognition	16
B		Steering wheel controls.....	6
Basic operation.....	10	System settings.....	10
Bluetooth connection.....	17	V	
C		Voice recognition.....	16
Connecting a phone.....	17		
Control elements.....	6		
D			
Display operation.....	10		
I			
Info Display.....	6		
Introduction	6		
N			
Navigation system	14		
P			
Pairing a phone.....	17		
Phone			
Bluetooth connection.....	17		
Playing audio.....	12		
R			
Radio.....	12		
Route guidance.....	14		

Audio system

Introduction	20
Basic operation	24
Audio	25
Speech recognition	27
Phone	28
Index	30

Emergency numbers		
For emergency service call the Vauxhall Incident Manager		0800 55 33 88 (Free Linkline)*
Vauxhall Assistance General Enquiries		0845 7565 565
You will need to provide:	Vehicle registration number	Model and colour of your Vauxhall
	Contact telephone number	Details of your precise location

* Calls may be chargeable from mobile phones

Introduction

Notice

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to this vehicle due to model variant, country specifications, special equipment or accessories.

Important information on operation and traffic safety

Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.


Radio reception








Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

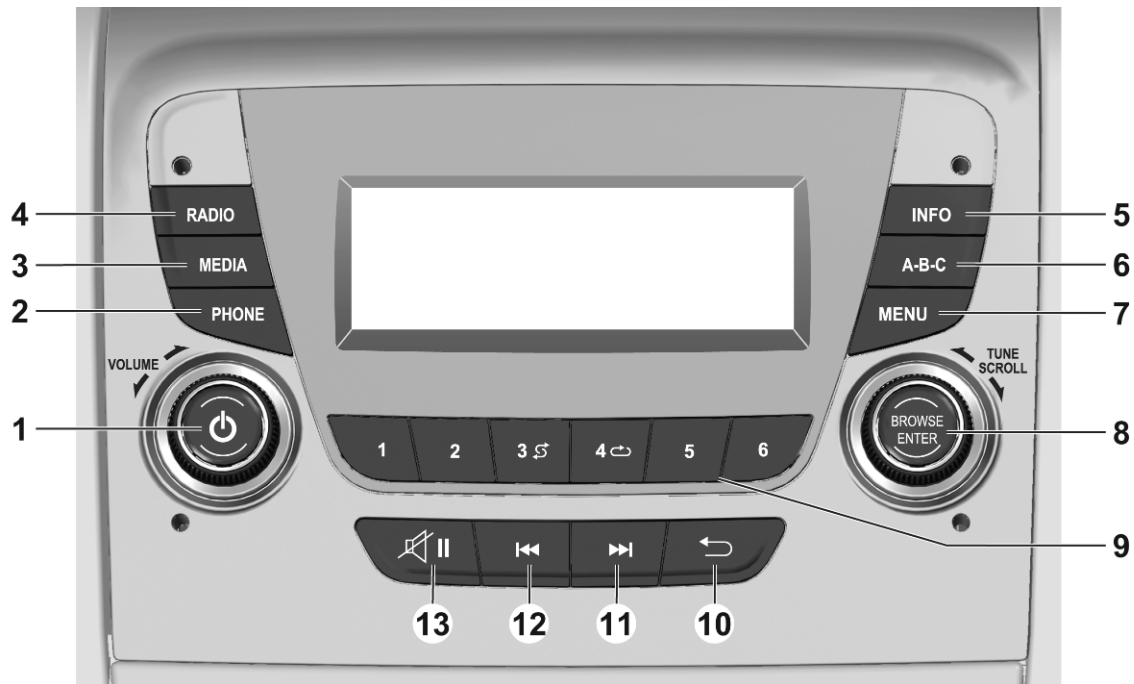- changes in distance from the transmitter
- multipath reception due to reflection
- shadowing


Introduction

Control panel



- 1**  Press: switch power on / off.
Rotate: adjust the volume.
- 2** **PHONE**
Open the phone screen.
- 3** **MEDIA**
Select the audio source.
- 4** **RADIO**
Select the waveband.
- 5** **INFO**
View information on the current radio station or media.
- 6** **A-B-C**
Open the station list or select one of the memorised station levels for FM and AM.
- 7** **MENU**
Open the settings menu.
- 8** **BROWSE / ENTER**
Press: Confirm a selection.
Rotate: Scroll through a list or adjust the radio station.
- 9** **1-6**
Press: select a saved radio station.
Press and hold: save the current radio station.
Press  to activate or deactivate shuffle.
Press  to activate or deactivate repeat.
- 10** 
Return to the previous screen.
- 11** 
Press: select the next radio station or track.
Press and hold: fast-forward.
- 12** 
Press: select the previous radio station or track.
Press and hold: rewind.
- 13** 
Mute the volume or pause the media.

Steering wheel controls

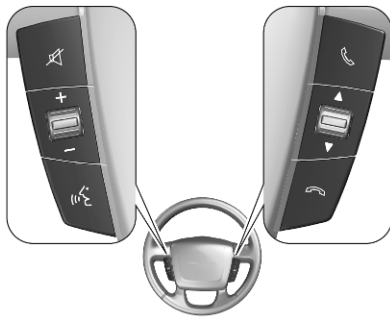

- 🔇 : Activate or deactivate the mute mode or pause the media.
During a phone call: deactivate or activate the microphone.
- ⊕ : Toggle up or down: adjust the volume.
- ⊖ : Activate or deactivate the voice recognition for radio or media functions or stop a voice message to start a new voice command.

- ☎ : Accept an incoming call or accept a second incoming call and put the active call on hold.
Activate or deactivate the voice recognition for the phone function or stop a voice message to start a new voice command.
- ⬆⬆ : Toggle up or down: select the previous / next radio station or track.
Toggle up or down continuously: scan the radio frequencies or fast-forward / rewind the media until the button is released.
- 📞 : Refuse an incoming call or hang up an active call.

Basic operation

Screen operations

Scrolling through a menu

To scroll through a menu, rotate **BROWSE / ENTER**.

Confirming a selection

To confirm a selection, press **BROWSE / ENTER**.

Returning to the previous screen

To return to the previous screen, press ↶.

System settings

Press **MENU** and select the system settings entry to open the settings menu.

The following settings can be adjusted:

- reset to the factory settings
- activate a 20 minutes delay for the switch-off
- set a volume limit when switching on

Audio

Switching the radio stations

Press ►► briefly to perform an automatic search for the next radio station.

Press ◀◀ briefly to perform an automatic search for the previous radio station.

Selecting the waveband

Press **RADIO** to select the waveband.

Station list

Press **A-B-C** to open an alphabetical station list.

Saving radio stations

The buttons **1-6** below the Info Display are preset buttons for radio stations.

To save a radio station, press and hold the desired button. Buttons which are already used for radio stations can be overwritten.

By pressing **A-B-C**, one of three preset levels per waveband can be selected. In total, 18 radio stations per waveband can be saved.

To tune into a saved radio station, briefly press the corresponding button.

Radio Data System (RDS) and Alternative Frequency (AF)

To activate or deactivate RDS or AF, press **MENU** and select the corresponding entry.

When AF are activated, the system is able to search at any time for the best available frequency of the current radio station.

Traffic announcements (TA)

To activate or deactivate TA, press **MENU** and select the corresponding entry.

When TA is activated, the current media is automatically interrupted so that a traffic announcement can be heard. Normal play of the previously playing media resumes at the end of the announcement.

Audio source

Press **MEDIA** to select the audio source.

Playing audio files

Touch ►► briefly to play the next track.

Touch and hold ►► to fast-forward the currently playing track.

Touch ◀◀ briefly to play the track from the beginning.

Touch ◀◀ briefly within the first 3 seconds of a track to play the previous track.

Touch and hold ◀◀ to rewind the currently playing track.

Press ⌘ to activate or deactivate shuffle. When shuffle is activated, the tracks will be played in random order and the corresponding icon will be displayed.

Press ↺ to activate or deactivate repeat. When repeat is activated, the currently playing track will be played repeatedly and the corresponding icon will be displayed.

Audio settings

 
Press **MENU** and select the audio settings entry to open the audio settings menu.

The following settings can be adjusted:

- treble
- medium
- bass
- balance
- volume adapted according to the vehicle speed
- loudness


Speech recognition

Activating speech recognition for radio and media functions

Press  on the steering wheel to start a speech recognition for radio or media functions.

Some example voice commands will be displayed on the Info Display.

Activating speech recognition for phone functions

Press  on the steering wheel to start a speech recognition for phone functions.

Some example voice commands will be displayed on the Info Display.

Phone

Bluetooth connection

Press **PHONE** to open the phone screen.

Connecting a mobile phone

Rotate **BROWSE / ENTER** to scroll through the phone menu and select the corresponding menu entry for connecting a mobile phone by pressing **BROWSE / ENTER**. Then search for the name of the system on the mobile phone.

Using the telephone keypad, enter the PIN displayed on the Info Display or confirm the PIN displayed on the mobile phone. During the pairing process, a screen page is displayed showing the progress of the operation. If the pairing procedure fails, it is recommended to deactivate and then reactivate the Bluetooth function on the mobile phone.


Making a call


To make a call, choose one of the contacts from the contact list, dial a telephone number via the keyboard or select a number from the recent calls list.

Rotate **BROWSE / ENTER** to select the contact list, the keyboard or the recent calls list.

Receiving a call

An incoming call is announced by a ring and a message on the Info Display.

To accept an incoming call, press **BROWSE / ENTER** on the control panel or  on the steering wheel.

To refuse or hang up the call, press  on the steering wheel.

Index

A			
Audio.....	25	Steering wheel controls.....	20
Audio settings.....	25	System settings.....	24
B		T	
Basic operation.....	24	Traffic programme.....	25
Bluetooth connection.....	28	V	
C		Voice recognition.....	27
Connecting a phone.....	28		
Control elements.....	20		
D			
Display operation.....	24		
I			
Info Display.....	20		
Introduction	20		
P			
Pairing a phone.....	28		
Phone			
Bluetooth connection.....	28		
Playing audio.....	25		
R			
Radio.....	25		
S			
Sound settings.....	25		
Speech recognition	27		

Copyright by Vauxhall Motors Ltd.

The information contained in this publication is effective as of the date indicated below. Vauxhall Motors Ltd. reserves the right to make changes to the technical specifications, features and design of the vehicles relative to the information contained in this publication, as well as changes to the publication itself.

Edition: September 2021, Vauxhall Motors Ltd.

Printed on chlorine-free bleached paper.

ID-VMVCIRIE2109-en

