 






VIVARO L1 H1

Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

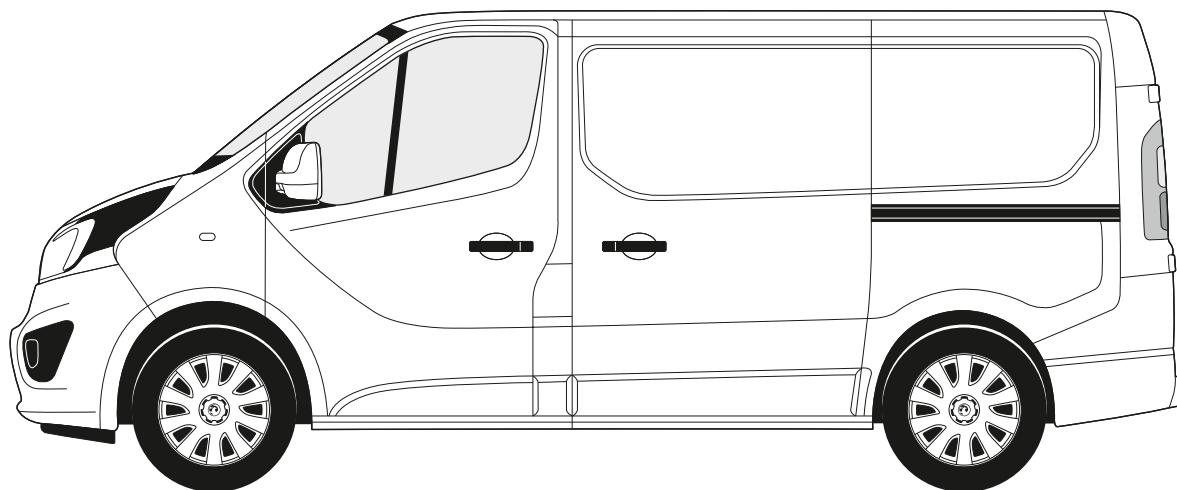




VIVARO L1 H1

 Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

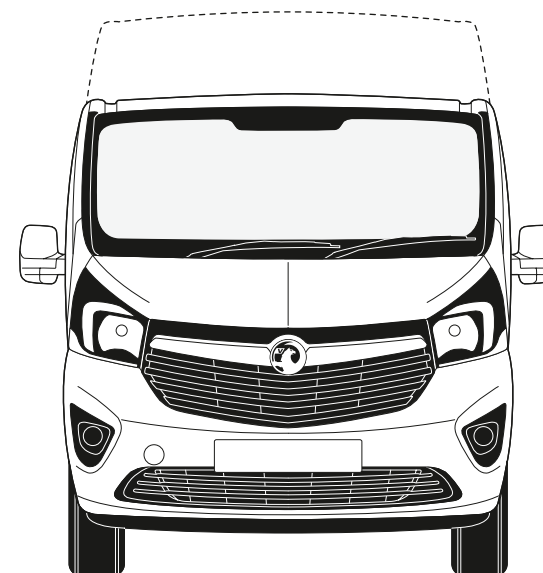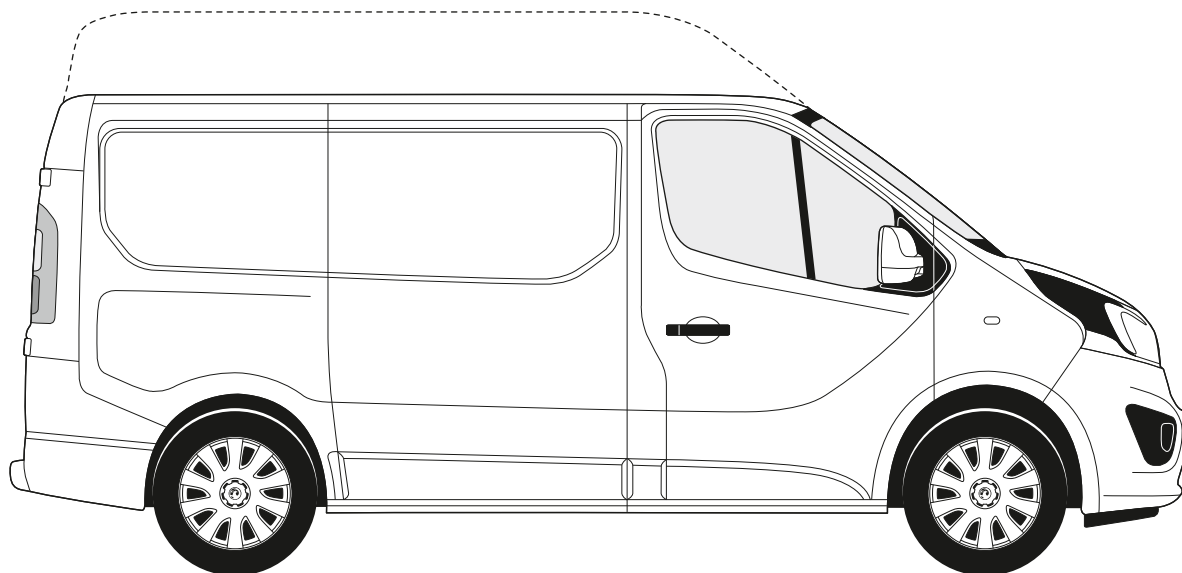




VIVARO L1 H2

 Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

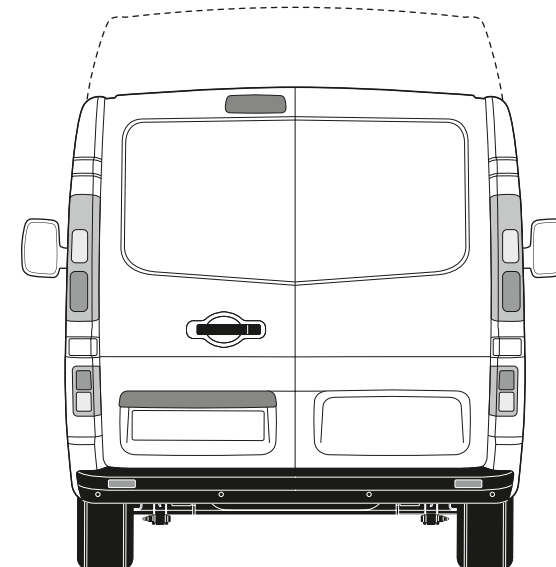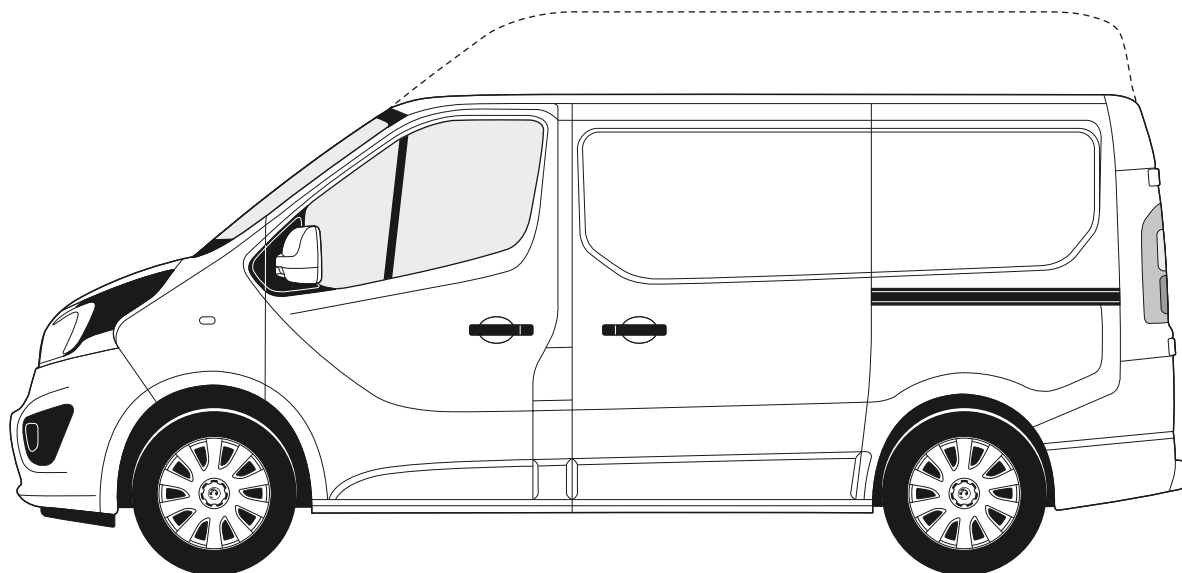


VIVARO L1 H2

 Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

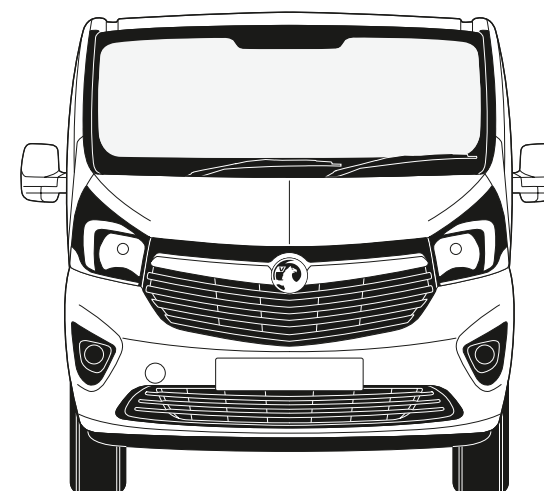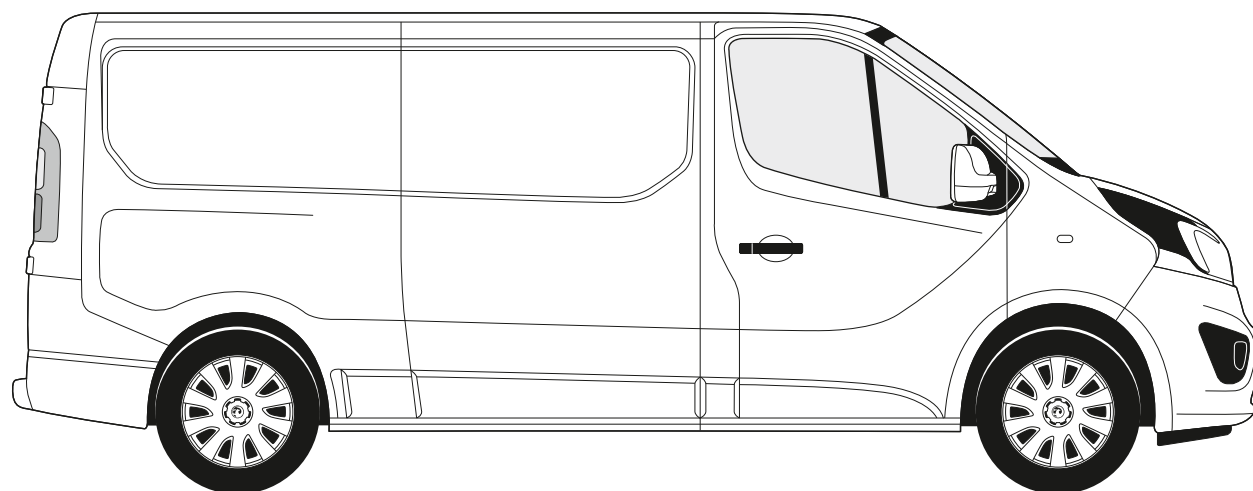



VIVARO L2 H1

Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

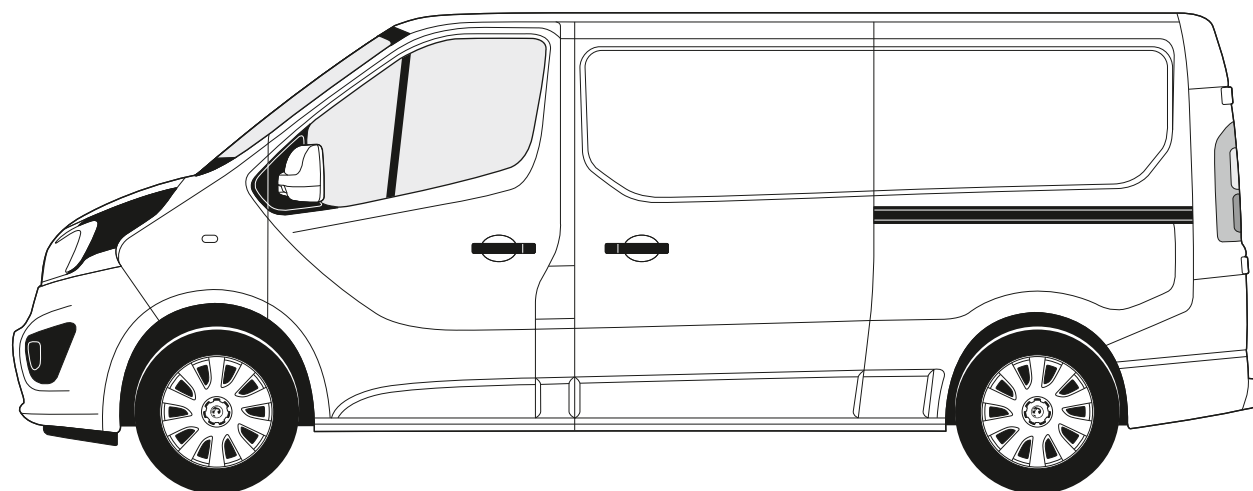




VIVARO L2 H1

Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

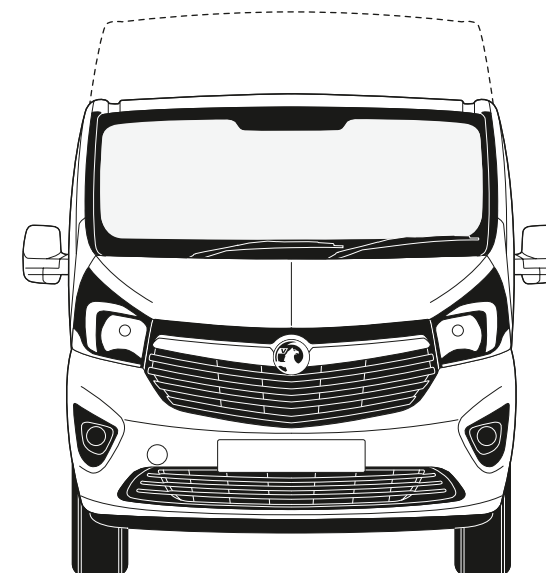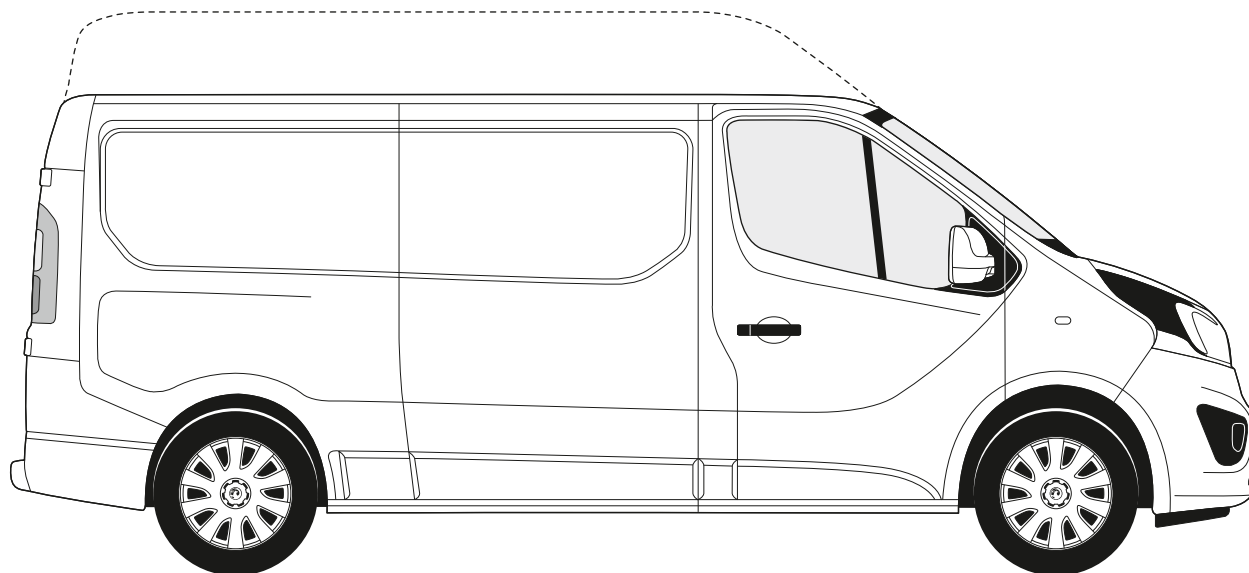

VIVARO L2 H2

 Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.

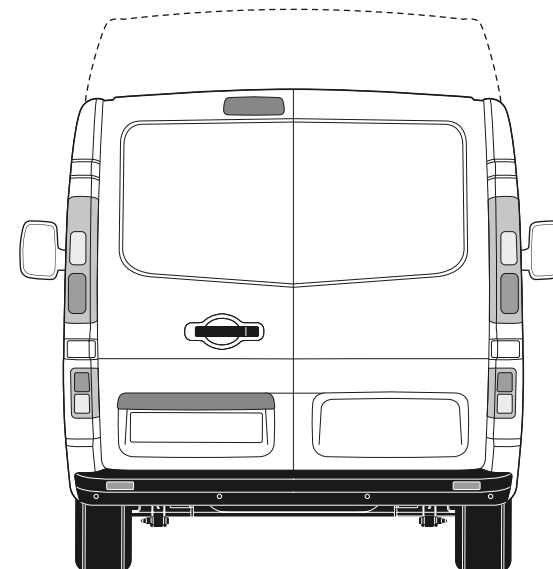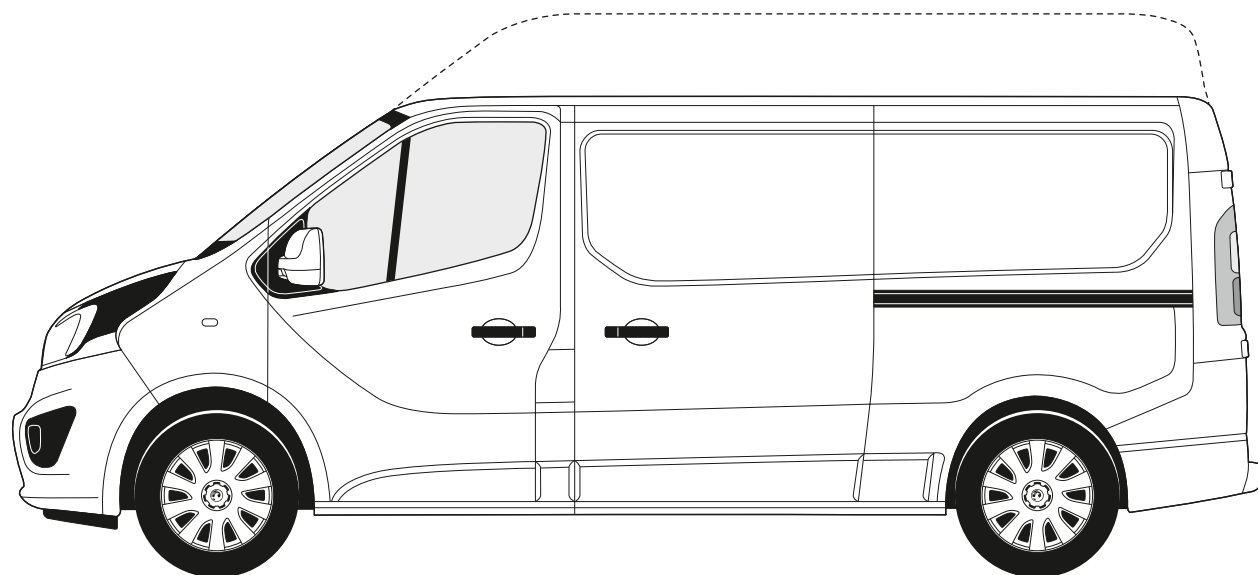

VIVARO L2 H2

Data on this drawing is for guidance only and may be subject to change without notice. Always check actual vehicle for exact dimensions.