



Retractable steel roof Quick Reference Guide

Refer to the Owner's Manual for more detailed information.

Important information

Exercise care when opening the roof. Risk of injury.

Pay close attention to the roof's movement zone during operation. Make sure that nothing could become trapped.

 
Make sure no one is in the movement zone during roof operation. Risk of injury.

Before operating the roof in confined areas, parking garages and the like, check the amount of vertical clearance available.

Vehicle passengers should be informed accordingly.

Before leaving the vehicle, remove the ignition key in order to prevent unauthorized operation of the windows and Retractable steel roof.


Luggage compartment

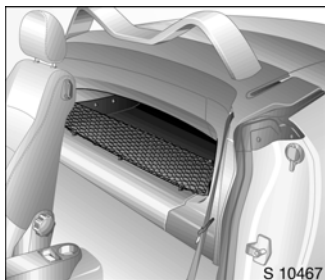

Storage compartment behind the seats:

The compartment is only suitable for stowing light objects. Maximum load: 10 kg.

 Important: Secure objects to prevent them from falling out and causing injury.

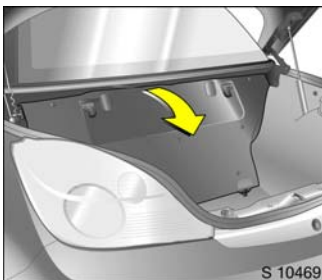


Luggage compartment partition:

With the Retractable steel roof closed, pull the centre of the partition, release it and fold it rearward until catches engage.

The luggage compartment partition must be secured in the rearward position if the Retractable steel roof is to be opened.

 Place no objects in front of the luggage compartment partition.

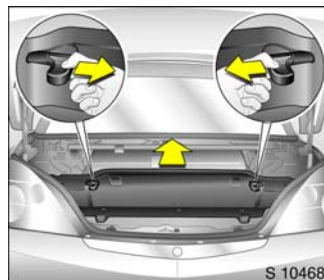


When the Retractable steel roof is closed, the luggage compartment partition can be folded forward to enlarge the luggage compartment.

Rotate both catches to the horizontal position and pull both catches inward to release - see figure 10468.

Return both catches to their original position and fold the luggage compartment partition forward, until it is locked in the forward position.

 
Retractable steel roof

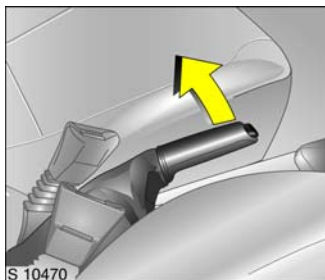

Opening the roof:

Only with the vehicle stationary.

 
Apply the hand brake.

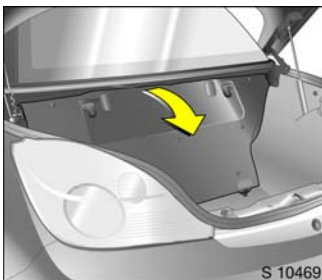


Engage the luggage compartment partition in the rear position.

Place no objects in front of the rear window or in front of the luggage compartment partition.

 
Close the boot lid.

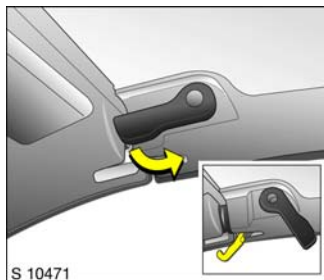

 
Release the locking levers on upper right and left of the window frame, pulling both levers all the way down. Both retaining hooks must not be engaged.

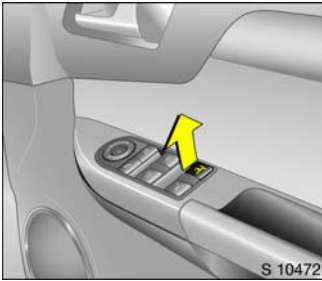


Switch on ignition.

Pull  until the roof is completely open and the boot is closed. Releasing the switch interrupts operation.

 An acoustic signal sounds at the beginning and end of the procedure.

 If the handbrake is not engaged, the roof lock is not released or the luggage compartment partition is not folded back when button  is actuated, a warning buzzer sounds and the roof does not open.

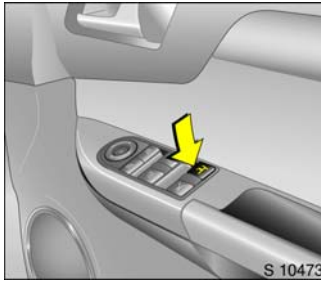


Closing the roof:

Only with stationary vehicle and closed boot lid.


The luggage compartment partition must be engaged in its rear position. Do not place any objects in front of the luggage compartment partition.


Apply hand brake.

 Switch on ignition.

Press  until the roof and boot lid are completely closed. Releasing the switch interrupts operation.

 An acoustic signal sounds at the beginning and end of the procedure.

 If button  is actuated when the hand brake is not engaged, a warning buzzer sounds and the roof remains open.

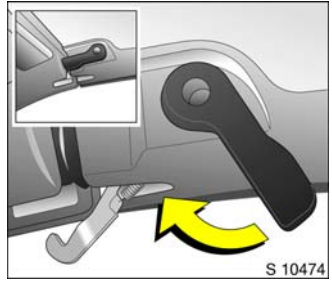


Press the locking levers on upper right and left of the window frame all the way up.

the retaining hooks must engage in the corresponding recess and the roof must securely lock.

Note

 A warning buzzer sounds for 5 seconds after the hand brake is released and the vehicle starts off if the roof has not been properly closed or opened. Remedy this by stopping the vehicle and repeating the closing or opening procedure.

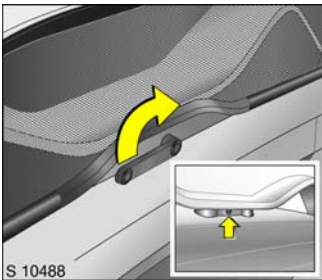

Wind deflector:

Install the wind deflector to reduce wind turbulence, draught and noise in the passenger compartment when the retractable steel roof is open.

Insert the wind deflector in the opening in the centre of the rollover protection and fasten it with the crank.

When removed, store the wind deflector in the luggage compartment.