


S 12211

Heated rear window, heated exterior mirrors *

On = Press .
Off = Press again.
 LED in pushbutton.


Heating operational with ignition on.
 Heating switches off automatically after approx. 15 minutes.

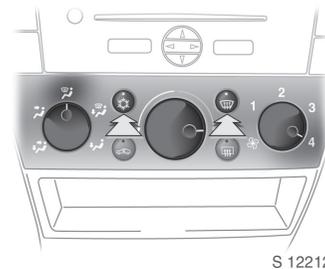

S 12212

Window demisting and defrosting:

Set air distribution to ; turn rotary knob for temperature and airflow clockwise. Air conditioning system *: Press buttons and ; Automatic air conditioning system *: Also turn rotary knob for temperature clockwise and airflow to **A**; Electronic Climate Control *: press .

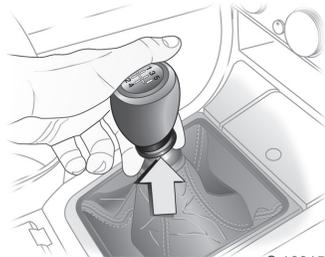

S 12215

Manual transmission:

Reverse gear: with vehicle stationary, pull the ring up three seconds after depressing clutch pedal and engage gear.

If gear does not engage, set lever to neutral, release clutch and depress again; then repeat gear selection.



S 12213

Automatic transmission *

P = Park position (with vehicle stationary, first apply handbrake)
R = Reverse (with vehicle stationary)
N = Neutral (idling)
D = Automatic gear selection

Start in **P** or **N**. To leave **P**, switch on ignition, depress footbrake and press selector lever button. To engage **P** or **R**, press selector lever button.




S 13774

Manual mode (ActiveSelect) *:

+ = Shift to a higher gear
- = Shift to a lower gear
 Shift lever from **D** first to the left, then forwards or backwards to change gears. Starting-off aid: Press button; indicator illuminates in transmission display, vehicle starts-off in 4th gear. Press button again to switch off.

Transmission fault: illuminates.

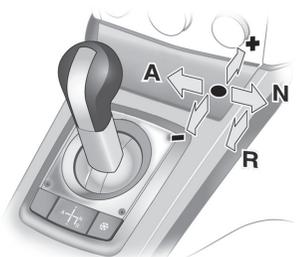

S 13778

Easytronic *:

N = Neutral (idling)
● = Drive position
+ = Higher gear
- = Lower gear
A = Automatic/Manual mode selector
R = Reverse (with selector lever lock)

Depress footbrake before starting. Move selector lever in appropriate direction as far as it will go. Lever returns to original position when released.

Tyre psi (3 person loads), Estate		
Engines	Tyres	Front Rear
1.8P	All tyres	29 32
2.0P	All except below	33 33
	205/55 R16	35 35
2.2P	All except below	32 32
	205/55 R16, 195/65 R15	33 33
2.8P	All except below	39 35
	215/55 R16 (manual)	36 33
	215/55 R16 (auto)	38 35
	225/45 R17 (auto)	41 36
VXR	All except below	42 38
	225/45 R17	41 36
1.9	All except below	33 33
	195/65 R15, 205/55 R16	35 35
1.9DT	All except below	32 32
	195/65 R15, 205/55 R16	33 33
3.0D	All except below	38 35
	225/45 R17	39 35
	215/55 R16	36 33

Tyre psi (3 person loads), Saloon/Hatch		
Engines	Tyres	Front Rear
1.8P	All tyres	29 32
2.0P	All except below	33 33
	205/55 R16	35 35
2.2P	All except below	32 32
	195/65 R15, 205/55 R16	33 33
2.8P	All except below	38 35
	with automatic transmission	39 35
	215/55 R16 (manual)	35 35
	215/55 R16 (auto)	36 33
VXR	All except below	42 38
	225/45 R17	41 36
1.9	All except below	33 33
	195/65 R15, 205/55 R16	35 35
1.9DT	All except below	32 32
	195/65 R15, 205/55 R16	33 33

Tyre psi (3 person loads), Saloon/Hatch (continued)		
Engines	Tyres	Front Rear
3.0D	All except below	38 35
	225/45 R17	39 35
	215/55 R16	36 33
Tyre psi (3 person loads), Saloon/Hatch, Estate with 19-inch wheels		
1.8P, 2.0P, 2.2P, 1.9D	All except below	33 33
	235/35 R19	39 35
1.9D, 2.0P	205/50 R17	39 35
	2.8P, 3.0D	235/35 R19
2.8P	205/50 R17	42 38
	215/55 R16, 225/45 R17	41 36
3.0D	215/55 R16, 225/45 R17	39 36

All temporary space saver spare wheels
 T 115/70 R16 61 psi



Vectra


Quick Reference Guide



Refer to Owner's Manual for detailed information.


Note: some items described may be optional *

Instruments and controls

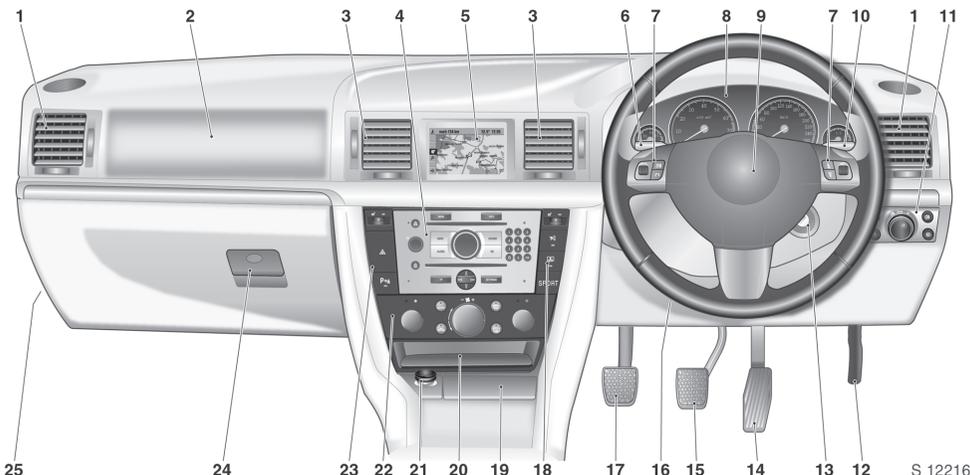

- Side air vents
- Front passenger's airbag
- Centre air vents
- Infotainment system *
- Central information display for time, date, outside temperature, Infotainment system *, check control *, trip computer *, Electronic Climate Control *
- Turn signal lights, headlight flash, dipped and main beam, door-to-door lighting *, parking lights, cruise control *
- Steering wheel remote control *
- Instruments
- Horn, driver's airbag
- Windscreen wiper and wash system, headlight wash system *, rear window wash system *
- Parking lights, dipped beam, instrument illumination, fog tail light, front fog lights *, headlight range adjustment *
- Bonnet release lever
- Starter switch with steering column lock
- Accelerator pedal
- Brake pedal
- Steering wheel adjustment
- Clutch pedal *
- Heated seat (right) *, seat climate control *, Vauxhall alarm system *, rear window blind *, Electronic Stability Programme *, SPORT mode *
- Ashtray *
- Stowage compartment with AUX input *
- Cigarette lighter * or accessory socket
- Climate control
- Heated seat (left) *, hazard warning lights, parking distance sensors *
- Glove compartment
- Fusebox

Vehicle security

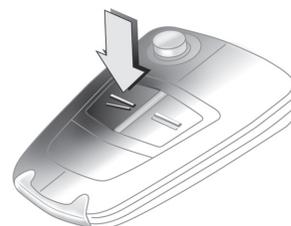


S 11571

Unlocking:

Press button on remote control - or - turn key in driver's door lock towards front of vehicle, turn key back to the vertical position and remove.

To unlock from inside, press central locking button in the driver's door.

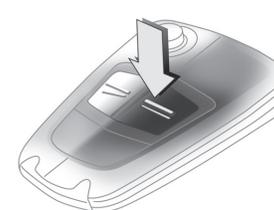

S 11572


Locking:

Press button on remote control. To lock from inside, press central locking button in the driver's door with the doors closed.

Electronic immobiliser

■ Deactivated with key in starter switch.
 ■ Activated when key is removed.

Engine cannot be started in any other way, so keep spare key in a safe place!

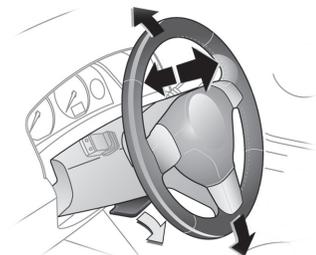


S 14773

Steering wheel adjustment *:


Move lever down, adjust height and distance, move lever up and engage into position.

Adjust steering wheel only when vehicle is stationary and steering column lock is released.

Vehicle features

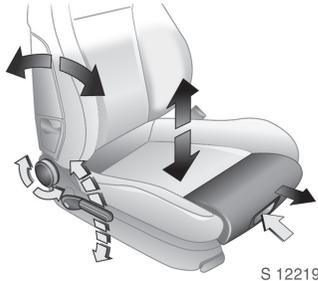

S 12219

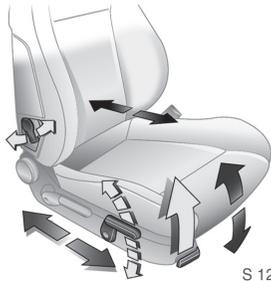

S 12220

Front seat adjustment:


1. Backrest rake
2. Seat height *
3. Thigh support *

To adjust front and outboard rear seat head restraints: Press button on side of head restraint to release, adjust height and engage.

Front seat adjustment (continued):

4. Lumbar support *
5. Seat inclination *
6. Longitudinal positioning


Important: Do not sit nearer than 10 inches (25cm) from steering wheel, to permit safe airbag deployment.

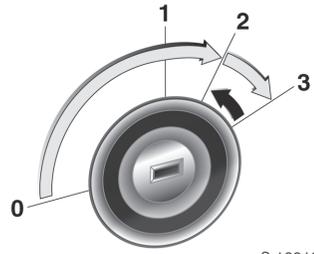


S 12210

Starting the engine:

Operate clutch and brake pedals. Automatic transmission * in P or N. Easytronic *: depress brake pedal, do not accelerate. Petrol engines: Turn key to 3. Diesel engines: Turn key to 2, wait for preheating control indicator to go out, then turn key to 3. Release key once engine is running.

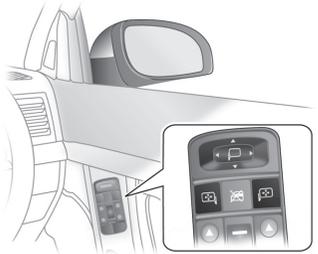

S 12222

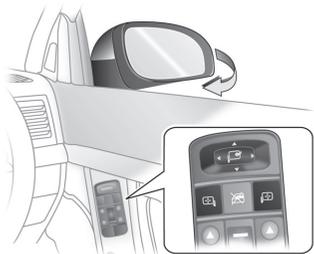

S 12223

Adjusting exterior mirrors:

Outer mirror switch pressed: four-way switch adjusts driver's and passenger's mirror. Inner mirror switch pressed: only front passenger's mirror is adjusted.

Electric seat adjustment with Memory function *: Select reverse gear with inner mirror switch pressed; front passenger's mirror points to rear tyres as a parking aid.

Automatic anti-dazzle mirror on driver's side *: Dazzle at night is reduced.

Swinging in exterior mirrors *:

Push four-way switch to the right: Exterior mirrors swivel in. Push four-way switch to the left: Exterior mirrors swivel out. Swivelling allowed upto speeds of 4 mph. If necessary, the exterior mirrors can be swivelled manually: Press outer edge of mirror housing gently.

Driving with swivelled-in exterior mirrors is not permitted.

Press button:

= Courtesy light
 = Front fog lights *
 = Fog tail light
 = Instrument illumination
 = Headlight range adjustment: Reduces dazzle for oncoming traffic.

Manual headlight range adjustment:

Without level control system

- 0 = Front seats occupied only
- 1 = All seats occupied
- 2 = All seats and luggage
- 3 = Driver's seat only and luggage

With level control system *

- 0 = Front seats occupied
- 1 = All seats occupied
- 1 = All seats and luggage
- 2 = Driver's seat only and luggage

Turn light switch:

- 0 = Off
- = Parking lights
- = Dipped or main beam
- auto = Automatic dipped beam activation *

S 12225



S 12224


Fitting seat belt:

Draw seat belt smoothly from inertia reel, guide over shoulder and engage in belt buckle.

The belt must not be twisted at any point. The lap belt must lie snugly against the body.

The front seat backrests must not be tilted back too far (recommended maximum tilting angle approx. 25°).

To release belt, press button on buckle.

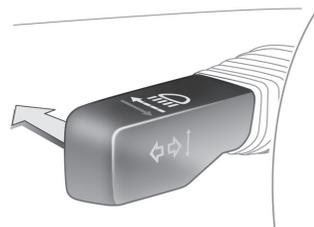


S 12226

Switching to dipped or main beam:

Main beam = Push stalk forwards.
Dipped beam = Push forwards again. To operate the headlight flash, pull stalk towards the steering wheel.

Vehicle features

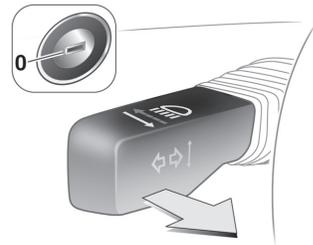


S 12227

Door-to-door lighting *:

Dipped beam and reversing lights can be set to illuminate for approx. 30 seconds after closing driver's door: Switch ignition off, remove key, open driver's door, pull turn signal stalk towards steering wheel and close driver's door.

If the driver's door is left open, the lights will extinguish after two minutes.

Cancel by inserting key in starter switch or by pulling turn signal stalk towards the steering wheel with the driver's door open.

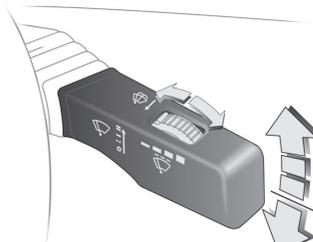

S 12230

Windscreen wiper:

Gently push stalk upwards.

- = Off
- = Adjustable timed interval wipe
- = Slow
- == = Fast

Stalk always moves back to the starting position. To select the next higher or lower stage: move stalk slightly.


Push stalk past resistance point and hold: wiper stages are run through; an acoustic signal sounds at position ○.

Adjustable timed interval wipe --:
 Adjuster wheel right = Short intervals,
 Adjuster wheel left = Long intervals.

Stalk down from position ○: Single wipe.

Warning:

In freezing conditions, wiper blades can freeze to the windscreen. Release wiper blades from the ice before starting the vehicle, to prevent wiper motor damage.

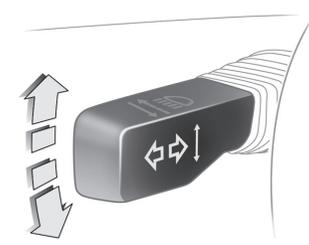

S 12228

Turn signal lights:


Right = Move stalk up

Left = Move stalk down

After operation, the turn signal stalk returns to its starting position.

If the stalk is moved past the resistance point, the turn signal light remains on. When the steering wheel moves back towards the straight-ahead position, the turn signal light is automatically deactivated.

When lane changing, move stalk to resistance point and release: turn signal flashes three times.

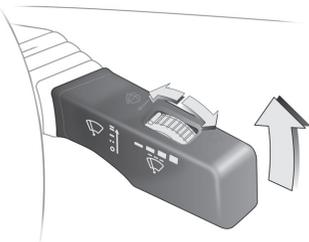

S 12231

Automatic wiping with rain sensor *:


Gently push stalk upwards.

- = Off
- = Automatic wiping with rain sensor

The rain sensor detects the amount of water on the windscreen and automatically controls the windscreen wiper.

Adjust the sensitivity of the system using the adjuster wheel:
 Adjuster wheel right = High sensitivity,
 Adjuster wheel left = Low sensitivity.

Keep the sensor area clean by operating the windscreen wash system regularly.

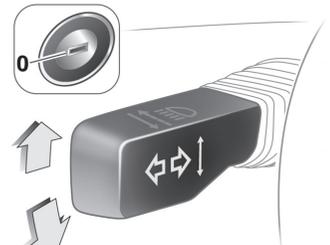

S 12229


Parking lights:

The front parking light and the tail light on one side of the vehicle can be activated when parking the vehicle: Turn light switch to 0 or AUTO *, switch ignition off, move turn signal stalk fully upwards (right parking light) or downwards (left parking light).

An acoustic signal sounds and the respective turn signal control indicator illuminates briefly in instrument cluster.

Remove ignition key before leaving the vehicle.

Switch off by switching ignition on or by moving stalk in opposite direction.

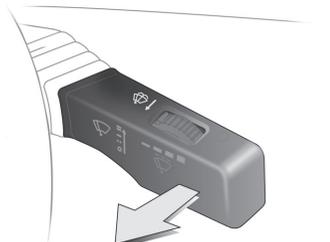

S 12232

Windscreen wash system and headlight wash system *:

Pull stalk towards steering wheel. The wiper is switched on for several wipe operations. A single after-wipe occurs at low speeds.

The headlight wash system * is ready for operation when the headlights are switched on. Wash fluid is sprayed onto the headlights once. Then the headlight wash system is disabled for 2 minutes.

On vehicles fitted with rain sensor *, keep the sensor area clean by operating the windscreen wash system regularly.

Engine oil:

Check every 300 miles and prior to long journeys.

Important: It is the owner's responsibility to maintain the correct level of an appropriate quality oil in the engine.

Refuelling:

Use unleaded fuel for petrol engines.

Fuel tank capacity Saloon: 61 litres,
 Hatch: 61 litres,
 Estate: 60 litres.