

Vehicle features



Automatic transmission:


P = park
R = reverse
N = neutral
D = drive

The selector lever can only be moved out of **P** or **N** when the ignition is on and the foot brake is depressed (selector lever lock).

To engage **P** or **R**, press the release button on selector lever.

Manual transmission:

Reverse gear: With vehicle stationary, wait 3 seconds after depressing clutch pedal, then press button on selector lever and engage gear.

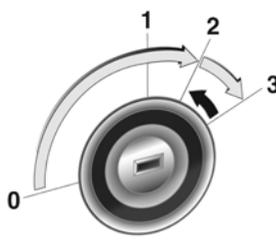

Starting the engine:


- Turn key to position 1
- Move steering wheel slightly to release steering wheel lock
- Manual transmission in neutral with clutch depressed
- Automatic transmission in **P** or **N** with brake pedal depressed
- Do not accelerate
- Diesel engines: Turn key to position 2 for preheating and wait for 00 to extinguish in instrument cluster
- Turn key to position 3 and release when engine is running



Starting the engine with the Start/Stop button:

The electronic key for the Open&Start system must be inside the vehicle.

- Operate clutch and brake
- Automatic transmission in **P** or **N**
- Do not accelerate
- Diesel engines: Press Start/Stop button briefly for preheating and wait for 00 to extinguish in instrument cluster
- Press Start/Stop button for 1 second and release when engine is running

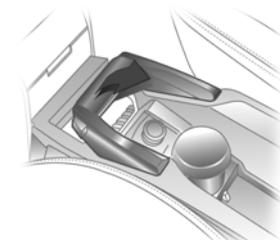


Parking brake:

Always apply firmly without operating release button and apply as firmly as possible on uphill or downhill slopes.

To release the parking brake, pull the lever up slightly, press release button and fully lower the lever.

To reduce the operating forces, depress the foot brake at the same time.

Vehicle features

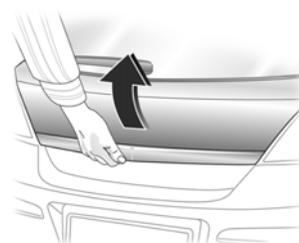

Opening the load compartment:

To open the tailgate, press the button under the moulding after unlocking the vehicle.


Warning:

Do not drive with the tailgate open or ajar, e.g. when transporting bulky objects, as toxic exhaust gases could enter the vehicle.

Closing the load compartment:

Use the interior handle to close the tailgate.

Do not press the button under the tailgate moulding while closing, as this will unlock the tailgate again.

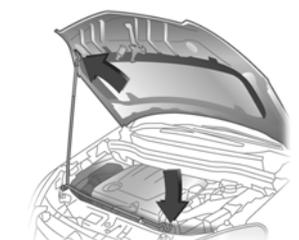


Secure the bonnet in the upright position using the support rod located at the front of the engine compartment.

Closing the bonnet:

Before closing the bonnet, press the support into the holder.

Lower the bonnet and allow it to drop into the catch. Check that the bonnet is engaged.

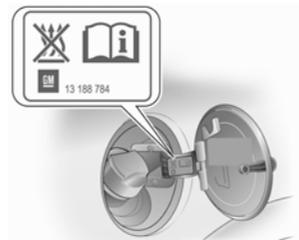


Refuelling:

Before refuelling, switch off engine and any external heaters with combustion chambers (identified by sticker on fuel filler flap).

Switch off any mobile phones. Fuel filler flap is located at right rear side of vehicle.

The fuel filler flap can only be opened if the vehicle is unlocked. Pull flap at the recess and open.

To open, turn cap slowly to the left.

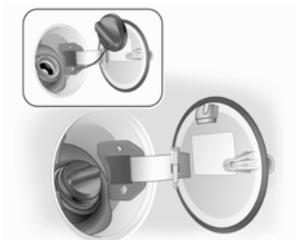

The filler cap can be retained in the bracket on the filler flap.

To refuel, fully insert the pump nozzle and switch it on. After the automatic cut-off, the tank can be topped-up with maximum two doses of fuel.

Wipe off any overflowing fuel immediately.

Petrol engines - use unleaded fuel meeting specifications of EN 228 or E DIN 51626-1 or equivalent.

Diesel engines - use diesel fuel meeting specifications of EN 590.

Fuel tank capacity - 56 litres.

Vehicle features

Engine oil:

Check the engine oil level manually on a regular basis to prevent damage to the engine.

Ensure that the correct specification of oil is used.

Check with the vehicle on a level surface. The engine must be at operating temperature and switched off for at least 5 minutes.

Pull out the dipstick, wipe it clean, insert it to the stop on the handle, pull out and read the engine oil level.

Insert dipstick to stop on handle and make half a turn.

When the engine oil level has dropped to the **MIN** mark, top-up engine oil.

We recommend the use of the same grade of engine oil that was used at the last oil change.

Important:

It is the owner's responsibility to maintain the correct level of an appropriate quality oil in the engine.

Do not allow the engine oil level to drop below the minimum level!

Tyre pressure:

Check tyre pressures, including the spare, every 14 days and prior to any long journey; tyres should be checked when cold. This also applies to vehicles with tyre pressure monitoring system.

Remove the valve cap key from the fuel filler flap and use it to unscrew the valve cap. On vehicles with tyre pressure monitoring system, screw the adapter to the valve.

The tyre pressure data refers to cold tyres. It applies to summer and winter tyres.

Always inflate the spare tyre to the value specified for full load.

For the tyres approved for your vehicle, refer to the EEC Certificate of Conformity provided with your vehicle or other national registration documents.

The driver is responsible for correct adjustment of tyre pressure.

The ECO tyre pressure serves to achieve the smallest amount of fuel consumption possible. It must not be used with run-flat tyres.

Incorrect tyre pressures will impair safety, vehicle handling, comfort and fuel economy and increase tyre wear.

Warning:

If the pressure is too low, this can result in considerable tyre warm-up and internal damage, leading to tread separation and even to tyre blow-out at high speeds.

Consult a workshop regarding permitted tyres and further restrictions.

| Engine | Tyre pressure (psi) | | Tyre pressure (psi) | | Tyre pressure (psi) | | | | | | |
|---------------|---|-------|---------------------------------------|---------------|---------------------|-------|------|---------------|-----------------|----|----|
| | Comfort setting for load of upto 3 people | | ECO setting for load of upto 3 people | | For full load | | | | | | |
| | Tyres | Front | Rear | Engine | Tyres | Front | Rear | | | | |
| A18XEL | 195/65 R15 | 29 | 29 | A18XEL | 195/65 R15 | 36 | 36 | A18XEL | 195/65 R15 | 30 | 38 |
| A18XER | 205/55 R16 | 29 | 29 | A18XER | 205/55 R16 | 36 | 36 | A18XER | 205/55 R16 | 30 | 38 |
| | 225/45 R17 | 29 | 29 | | 225/45 R17 | 36 | 36 | | 225/45 R17 | 30 | 38 |
| | 225/40 R18 | 32 | 32 | | 225/40 R18 | -1) | -1) | | 225/40 R18 | 33 | 41 |
| A17DTJ | 195/60 R16 | 38 | 35 | A17DTJ | 195/60 R16 | -1) | -1) | A17DTJ | 195/60 R16 | 41 | 46 |
| A17DTR | 205/55 R16 | 35 | 32 | A17DTR | 205/55 R16 | -1) | -1) | A17DTR | 205/55 R16 | 38 | 45 |
| | 225/45 R17 | 35 | 32 | | 225/45 R17 | -1) | -1) | | 225/45 R17 | 38 | 45 |
| | 225/40 R18 | 36 | 33 | | 225/40 R18 | -1) | -1) | | 225/40 R18 | 39 | 45 |
| All | Temporary spare | 61 | 61 | All | Temporary spare | -1) | -1) | All | Temporary spare | 61 | 61 |

¹⁾ Do not use ECO tyre pressure for this tyre.




Zafira

Quick Reference Guide

Refer to Owner's Manual for detailed information. Illustrations may depict left-hand drive vehicles. Operation is similar for right-hand drive vehicles.



Depending on the model variant, special equipment and accessories, the scope of equipment on your vehicle may differ from the descriptions in this guide.

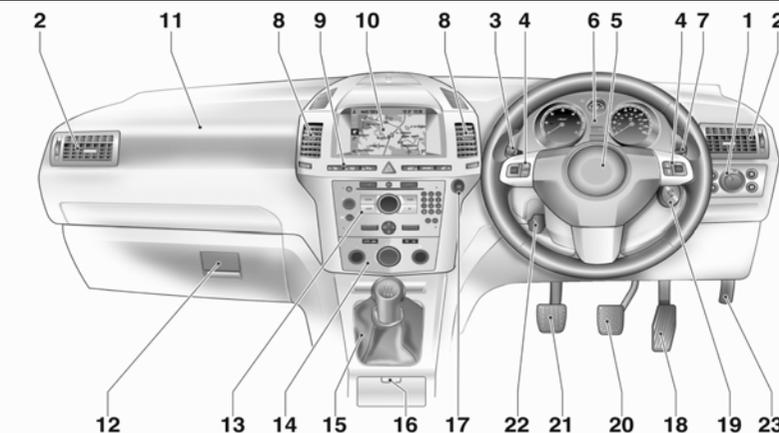

1. Light switch, front fog lights, rear fog lights, headlight range adjustment
2. Side air vents
3. Turn signals, headlights, exit lighting, parking lights, cruise control
4. Steering wheel controls
5. Horn, driver airbag
6. Instruments
7. Wiper and washer systems
8. Centre air vents
9. Hazard warning flashers, parking assist, central locking, tyre pressure monitoring, deflation detection system, Sport mode, heated seats
10. Info-Display, climate control, trip computer
11. Front passenger airbag
12. Glovebox
13. Infotainment system
14. Climate control system
15. Gear selector lever
16. Ashtray
17. Start/Stop button (Open&Start system)
18. Accelerator pedal
19. Ignition switch, steering wheel lock, Open&Start system sensor panel
20. Brake pedal
21. Clutch pedal
22. Steering wheel adjustment
23. Bonnet release lever

Vehicle security



Unlocking the vehicle:

First press button to extend key from foldaway section. Press button on remote control - or - turn key in driver's door lock to unlock the vehicle.



Open&Start system:

When in possession of the electronic key, pull the door handle from the outside to unlock the vehicle.

Locking the vehicle:

Press button on remote control - or - turn key in driver's door lock to lock vehicle and activate anti-theft alarm system.

Operate twice within 15 seconds to deadlock all doors.

Open&Start system:

Touch the sensor field in the door handle of one of the front doors. Touch the sensor field twice within 15 seconds to deadlock all doors.

Electronic immobiliser:

Activated automatically when key is removed from ignition switch or when engine is switched off by pressing the Start/Stop button.

Vehicle features



Longitudinal seat adjustment:
Pull handle, slide seat, release handle.

Danger:
Do not sit nearer than 25 cm from the steering wheel, to permit safe airbag deployment.




Seat backrests:
Turn handwheel.

Do not lean on seat when adjusting.

Do not angle the backrest too far back. We recommend a maximum rake of approx. 25°.



Seat height:
Lever pumping motion
up = seat higher
down = seat lower

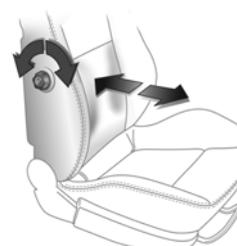

Lumbar support:
Turn handwheel.


Do not lean on backrest when adjusting.



Seat position:
Sit with buttocks as far back against backrest as possible.

Adjust distance between seat and pedals so that legs are slightly angled when depressing pedals.

Slide the front passenger seat as far back as possible.

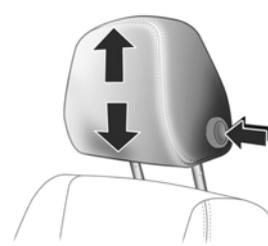

Head restraint adjustment:
Press the release button, adjust height and engage.


The upper edge of the head restraint should be at upper head level.



Seat belt:

Withdraw seat belt from retractor, guide it untwisted across the body and insert latch plate in belt buckle.

To release belt, press red button on belt buckle.

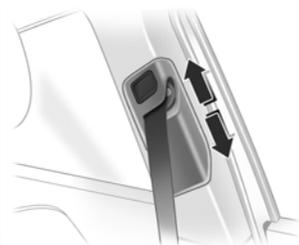

Seat belt height adjustment:

1. Pull belt out slightly.
2. Press button.
3. Adjust height and engage.

Adjust height so that belt lies across the shoulder. It must not lie across the throat or upper arm.



Steering wheel adjustment:

Unlock the lever, adjust the steering wheel, then engage the lever and ensure it is fully locked.

Adjust only when vehicle is stationary and steering wheel lock is released.

Vehicle features



Interior mirror:
To reduce dazzle, swivel the lever on the underside of the mirror housing.



Automatic anti-dazzle interior mirror:
Dazzle from following vehicles at night is automatically reduced if the vehicle is equipped with an automatic anti-dazzle interior mirror.

The lever will not be present on the underside of the mirror housing.



Electrical exterior mirrors:
Select the relevant exterior mirror with the switch, then swivel the control to adjust the mirror.



Electrical folding mirrors:
Press the button to fold exterior mirrors. Press again to return them to their original position.

If an electrically folded mirror is manually extended, pressing button will only electrically extend the other mirror.

Manual folding mirrors:
The exterior mirrors can be folded in by pressing gently on the outer edge of the housing.

For pedestrian safety, the exterior mirrors will swing out of their normal mounting position if they are struck with sufficient force.

Reposition the mirror by applying slight pressure to the mirror housing.



Power windows:
Power windows can be operated with the ignition on and within 5 minutes of switching ignition off, unless driver's door is opened.

Operate the switch for the respective window by pushing to open or pulling to close.

For vehicles with automatic feature, pull or press the switch again to stop window movement.

Safety function:
If the window glass encounters resistance above the middle of the window during automatic closing, it is immediately stopped and opened again.

Overload:
If the windows are operated repeatedly at short intervals, window operation is temporarily disabled.



Child safety system for rear windows:
Switch can be used to activate or deactivate the switches in the rear doors.

Operating windows from outside:
The windows can be operated remotely from outside the vehicle.

Press button or on remote control until all windows have opened or closed.

Alternatively, to close, touch the sensor field in the door handle until all windows are completely closed. The electronic key must be outside the vehicle, within a range of approx. 1 metre.

Vehicle features



Lighting:
Turn light switch:
AUTO = Automatic light control: Headlights are switched on and off automatically

0 = Off
☞ = Sidelights
☞☞ = Headlights

Press light switch:

☞☞ = Front fog lights
☞☞☞ = Rear fog light

Turn knob:

☞☞☞ = Headlight range adjustment
☞☞☞☞ = Instrument panel illumination



Headlight range adjustment:
Adapt headlight range to the vehicle load to prevent dazzling of other road users. Press knob and turn to required position.

Without automatic level control:

0 = Front seats occupied
1 = All seats occupied
2 = All seats occupied and load compartment laden
3 = Driver's seat occupied and load compartment laden

With automatic level control:


0 = Front seats occupied
1 = All seats occupied
1 = All seats occupied and load compartment laden
2 = Driver's seat occupied and load compartment laden



Automatic light control:
Light switch set to **AUTO**: When the engine is running, headlights are switched on when external light conditions are poor.

For safety reasons, the light switch should always remain in the **AUTO** position.

Move light switch to position ☞☞☞ if visibility is poor due to fog or mist.

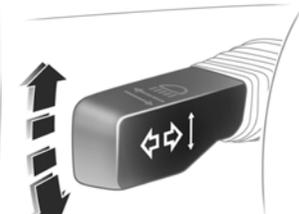

Turn and lane-change signals:
Lever up = Right turn signal
Lever down = Left turn signal

The lever always springs back to its original position.

If the lever is moved past the resistance point, the turn signal is switched on constantly. When the steering wheel is moved back the turn signal is automatically deactivated.

For three flashes, e.g. when changing lanes, press the lever until resistance is felt and then release.

Move lever to resistance point and hold for longer indication.

Switch the turn signal off manually by moving the lever slightly.




Front fog lights:
Operated with the ☞☞ button.

Front fog lights can only be switched on when both the ignition and headlights or sidelights are switched on.

Rear fog light:
Operated with the ☞☞☞ button.


Rear fog light can only be switched on when both the ignition and headlights or sidelights (with front fog lights) are switched on.

Vehicle rear fog light is deactivated when towing.

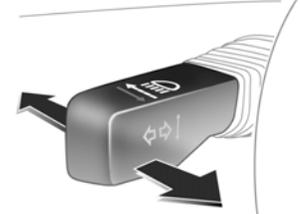

Headlight flash, high beam and low beam
Headlight flash = Pull lever
High beam = Push lever
Low beam = Pull or push lever

Vehicle features

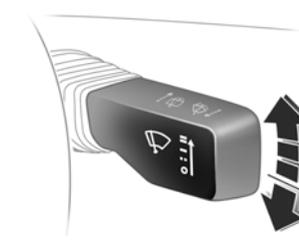

Windscreen wiper:
= = Fast
— = Slow
-- = Timed interval wiping or automatic wiping with rain sensor
0 = Off

For a single wipe when the windscreen wiper is off, press the lever down.

Run through the windscreen wiper stages by pushing the lever past the resistance point and holding. An acoustic signal sounds at 0.

Do not use if the windscreen is frozen.

Switch off in car washes.



Windscreen and headlight washer:
Pull lever. Washer fluid is sprayed onto the windscreen and the wiper wipes for a few strokes.

If the headlights are on, washer fluid is also sprayed onto the headlights. The headlight washer system is then inoperable for 2 minutes.




Hazard warning flashers:
Operated with the ☞☞☞ button.

The hazard warning flashers activate automatically if the airbags deploy.

Heated rear window, heated exterior mirrors:

The heating is operated by pressing the ☞☞☞ button. Heating functions with the engine running and is switched off automatically after a short time.

Depending on engine type, heating comes on automatically during driving when the diesel particle filter is being cleaned.

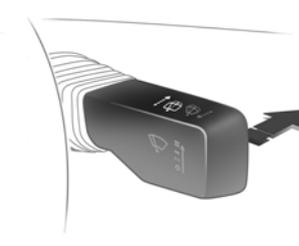

Rear window wiper and washer:
Push lever forwards. The rear window wiper swipes in interval mode. Switch off by pushing lever forwards again.

If the lever is held forwards, washer fluid is sprayed onto the rear window.

Do not use if the rear window is frozen.

Switch off in car washes.

The rear window wiper comes on automatically when the windscreen wiper is switched on and reverse gear is engaged.

Demisting and defrosting the windows:

■ Set air distribution to ☞☞☞.
■ Set temperature control to the warmest level.
■ Set fan speed to the highest level or to A.

■ Switch cooling ☞☞☞ on.
■ Press button ☞☞☞☞.
■ Switch heated rear window ☞☞☞ on.

■ Open side air vents and direct them towards the door windows.
■ For simultaneous warming of the foot well, set air distribution to position ☞☞☞.