

# Vauxhall Viva

Infotainment System





---

# Contents

R 4.0 IntelliLink .....	5
R300 BT .....	47



---

## R 4.0 IntelliLink

Introduction .....	6
Basic operation .....	14
Radio .....	20
External devices .....	26
Speech recognition .....	33
Phone .....	34
Index .....	44

# Introduction

General information .....	6
Theft-deterrent feature .....	7
Control elements overview .....	8
Usage .....	11

## General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

Using radio tuner functions, you may register up to 25 stations on five favourites pages.

You can connect external data storage devices, e.g. iPod, USB devices, or other auxiliary devices to the Infotainment system as further audio sources; either via cable or via Bluetooth.

In addition, the Infotainment system is equipped with a phone portal that allows for comfortable and safe use of your mobile phone in the vehicle.

Using the phone projection function, you can operate specific applications on your smartphone via the Infotainment system.

Optionally, the Infotainment system can be operated using the touch screen and buttons on the control panel, the controls on the steering wheel, or - if provided by your mobile phone - via speech recognition.

The well-thought-out design of the control elements, the touch screen and the clear displays enable you to control the system easily and intuitively.

### Notice

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

### Important information on operation and traffic safety

#### Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.

## Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter
- multipath reception due to reflection
- shadowing

## Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.


The Infotainment system therefore functions only in your vehicle and is worthless to a thief.




## Control elements overview


### Control panel






1	Display / Touch screen .....	14
2	Home menu .....	14
	Screen buttons for access to:	
	<b>AUDIO:</b> audio functions	
	<b>GALLERY:</b> picture and movie functions	
	<b>PHONE:</b> mobile phone functions	
	<b>PROJECTION:</b> phone projection	
	<b>SETTINGS:</b> system settings	
	<b>OnStar:</b> OnStar Wi-Fi settings .....	11
3	Time, date and temperature indicators .....	18
4		
	Short press: open phone menu .....	38
	or open phone projection function (if activated) .....	32
	Long press: activate speech recognition .....	33

5		
	Short press: skip to next station when radio active .....	20
	or skip to next track when external devices active .....	28
	Long press: seek up when radio active .....	20
	or fast forward when external devices active .....	28
6		
	Short press: switch on Infotainment system if turned off .....	11
	or mute system if turned on .	11
	Long press: switch off Infotainment system .....	11
	Turn: adjust volume .....	11
7		
	Short press: skip to previous station when radio active .....	20

	or skip to previous track when external devices active .....	28
	Long press: seek down when radio active .....	20
	or fast rewind when external devices active .....	28
8		
	Short press: open Home menu .....	11
	Long press: open phone projection function (if activated) .....	32

Steering wheel audio controls



- 1 
  - Short press: take phone call . 34
  - or dial last number in call list when phone menu displayed ..... 38
  - or switch between calls when calls are waiting ..... 38
  - Long press: activate speech recognition ..... 33
- 2 SRC (Source) ..... 11
  - Press: select audio source .... 11

Turn upwards/  
downwards: select next/  
previous preset radio  
station when radio active ..... 20

or select next/previous  
track/chapter/picture  
when external devices  
active ..... 28

or select next/previous  
entry in call list when  
phone portal active and  
call list open ..... 38

Turn upwards/downwards  
and hold: scroll quickly  
through the entries in the  
call list ..... 38

3 +  
Press: increase volume

4 -  
Press: reduce volume

5 

- Press: end/decline call ..... 38

or deactivate speech  
recognition ..... 33

or activate/deactivate  
mute function ..... 11

## Usage


### Control elements

The Infotainment system is operated via function buttons, a touch screen and menus that are shown on the display.


Inputs are made optionally via:

- the central control unit in the control panel ↪ 8
- the touch screen ↪ 14
- audio controls on the steering wheel ↪ 8
- the speech recognition ↪ 33


### Switching the Infotainment system on or off

Press . After switching on, the last selected Infotainment source becomes active.

### Automatic switch-off

If the Infotainment system has been switched on pressing  while the ignition is switched off, it will switch off again automatically 10 minutes after the last user input.

### Setting the volume


Turn . The current setting is shown on the display.


When the Infotainment system is switched on, the last selected volume is set, provided that it is lower than the maximum start-up volume. For a detailed description ↪ 17.

### Speed compensated volume

When the speed compensated volume is activated ↪ 17, the volume is adapted automatically to make up for the road and wind noise as you drive.

### Mute

Press  to mute the Infotainment system.

To cancel the mute function: press  again. The last selected volume is set again.

### Modes of operation

Press  to display the Home menu.



### Notice

For a detailed description of menu operation via touch screen ↪ 14.

### AUDIO

Select **AUDIO** to open the main menu of the last selected audio mode.

Select **Source** on the screen to display the interaction selector bar.



To change to another audio mode: touch one of the items in the interaction selector bar.

For a detailed description of:



- Radio functions ↪ 20
- External devices (**USB, AUX, Bluetooth**) ↪ 28

**Notice**

To easily return to the audio screen currently active, touch ⊕ in the top line of any screen.

**GALLERY**

Select **GALLERY** to open the picture and movie menu for files stored on an external device, e.g. USB stick or smartphone.

Select  or  to display the picture or movie menu. Select the desired picture or movie file to show the respective item on the display.



For a detailed description of:

- Picture functions ↪ 29
- Movie functions ↪ 31

**PHONE**

Before the phone portal can be used, a connection has to be established between the Infotainment system and the mobile phone.

For a detailed description of preparing and establishing a Bluetooth connection between the Infotainment system and a mobile phone ↪ 34.

If the mobile phone is connected, select **PHONE** to display the main menu of the phone portal.



For a detailed description of mobile phone operation via the Infotainment system ↪ 38.

## PROJECTION

To show specific apps of your smartphone display on the Infotainment system, connect your smartphone.


Select **PROJECTION** to start the projection function.

Depending on the smartphone connected, a main menu with different selectable apps is displayed.

For a detailed description ↗ 32.

## SETTINGS

Select **SETTINGS** to open a menu for various system related settings, e.g. deactivating **Audible Touch Feedback**.

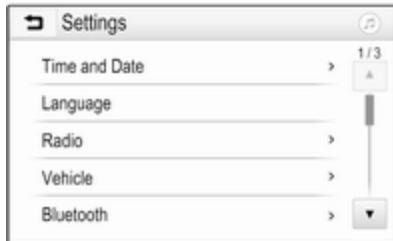

## OnStar

To display a menu with the OnStar Wi-Fi settings, select **OnStar**.

For a detailed description, see Owner's Manual.

## Basic operation

Basic operation .....	14
Tone settings .....	16
Volume settings .....	17
System settings .....	18

## Basic operation

The display of the Infotainment system has a touch-sensitive surface that allows direct interaction with the displayed menu controls.

### Caution

Do not use pointed or hard items like ballpoint pens, pencils or similar for touch screen operation.

### ↩ screen button



When operating the menus, press ↩ in the respective submenu to return to the next higher menu level.

When no ↩ screen button is displayed, you are on the top level of the respective menu. Press ⏠ to display the Home screen.


### Selecting or activating a screen button or menu item



Touch a screen button or menu item. The corresponding system function is activated, a message is shown, or a submenu with further options is displayed.

**Notice**

In subsequent chapters, the operating steps for selecting and activating a screen button or menu item via the touch screen will be described as "...select <button name>/<item name>".

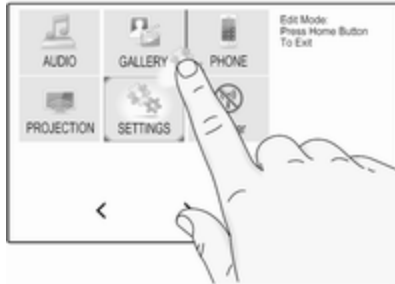**Moving items on the home menu**

Touch and hold the element you wish to move until red boxes appear around the icons. Move your finger to the desired location and release the element.

**Notice**


Constant pressure must be applied and the finger must be moved at constant speed.

All other items are rearranged.

Press one of the buttons on the control panel to exit edit mode.

**Notice**

Edit mode exits automatically after 30 seconds of inactivity.

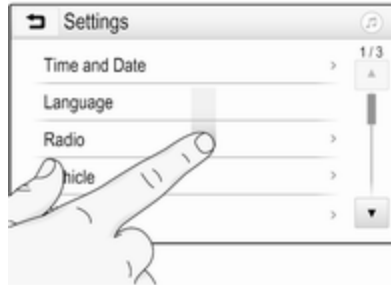**Scrolling lists**

If there are more items available than presentable on the screen, the list must be scrolled.

To scroll through a list of menu items, you may optionally:

- Place your finger anywhere on the screen and move it upwards or downwards.

**Notice**

Constant pressure must be applied and the finger must be moved at constant speed.

- Touch ▼ or ▲ at the top and at the bottom of the scroll bar.
- Move the slider of the scroll bar up and down with your finger.

To return to the top of the list, touch the list title.

**Notice**

In subsequent chapters, the operating steps for scrolling to a list item via the touch screen will be described as "...scroll to <item name>".

## Scrolling pages



### Notice

Pages are only scrollable if there is more than one page available.

To scroll from one page to another:

- Place your finger anywhere on the screen and move it left to scroll to the next page or right to scroll to the previous page.

### Notice

Constant pressure must be applied and the finger must be moved at constant speed.

- Touch > or < on the screen.


### Notice

In subsequent chapters, the operating steps for scrolling pages via the touch screen will be described as "...scroll to...page...".

## Tone settings

In the tone settings menu, the tone characteristics can be set. The menu may be accessed from each audio main menu.

To open the tone settings menu, select **Menu** in the bottom line of the respective audio main menu. If necessary, scroll through the list of menu items and select **Tone Settings**. The respective menu is displayed.

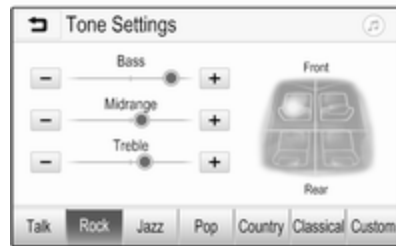

## Equaliser mode

Use this setting to optimise the tone for the style of music, e.g. **Rock** or **Classical**.

Select the desired sound style in the interaction selector bar at the bottom of the screen. If you choose **Custom**, you can manually adjust the following settings.

### Bass

Use this setting to enhance or attenuate the deep frequencies of the audio sources.

Touch + or - to adjust the setting.



### Midrange

Use this setting to enhance or attenuate the midrange frequencies of the audio source.

Touch + or - to adjust the setting.

### Treble

Use this setting to enhance or attenuate the high frequencies of the audio sources.

Touch + or - to adjust the setting.

### Setting balance and fader

Use the illustration at the right side of the menu to adjust balance and fader.

To define the point in the passenger compartment where the sound is at its highest level, touch the corresponding point in the illustration. Alternatively, you can move the red marker to the desired point.

#### Notice

The balance and fader settings are valid for all audio sources. They cannot be adjusted individually for each audio source.

## Volume settings

### Adjusting the maximum startup volume

Press  and then select **Settings**.

Select **Radio**, scroll through the list and then select **Max Startup Volume**.

Touch + or - to adjust the setting.

### Adjusting the speed compensated volume

Press  and then select **Settings**.

Select **Radio**, scroll through the list and then select **Auto Volume**.

To adjust the degree of volume adaptation, select one of the options in the list.

**Off:** no enhancement of volume with increasing vehicle speed.


**High:** maximum enhancement of volume with increasing vehicle speed.

### Activating or deactivating the audible touch feedback function

If the audible touch feedback function is activated, each touch of a screen button or menu item is indicated by a beeping sound.

Press  and then select **Settings**.

Select **Radio** and then scroll through the list to **Audible Touch Feedback**.

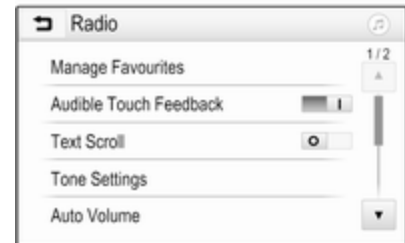

Touch the screen button next to **Audible Touch Feedback** to activate or deactivate the function.

### Volume of traffic announcements

To adjust the volume of traffic announcements, set the desired volume while a traffic announcement is given out by the system. The respective setting is then stored by the system.


### System settings

The following settings concern the whole system. All other settings are described by theme in the respective chapters of this manual.

#### Time and date settings

Press  and then select **Settings**.

Select **Time and Date** to display the respective submenu.

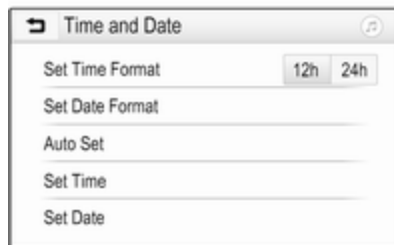

#### Set Time Format

To select the desired time format, touch the screen buttons **12 h** or **24 h**.

#### Set Date Format

To select the desired date format, select **Set Date Format** and choose between the available options in the submenu.

#### Auto Set

To choose whether time and date are to be set automatically or manually, select **Auto Set**.

For time and date to be set automatically, select **On - RDS**.

For time and date to be set manually, select **Off - Manual**. If **Auto Set** is set to **Off - Manual**, the submenu items **Set Time** and **Set Date** become available.

#### Set time and date

To adjust the time and date settings, select **Set Time** or **Set Date**.

Touch **+** and **-** to adjust the settings.

#### Language settings

Press  and then select **Settings**.

Select **Language** to display the respective menu.


To adjust the language for the menu texts: touch the desired language.

#### Text scroll function

If long text is displayed on the screen e.g. song titles or station names, the text may either be scrolled continually or it may be scrolled once and displayed in truncated form.

Press  and then select **Settings**.

Select **Radio**.

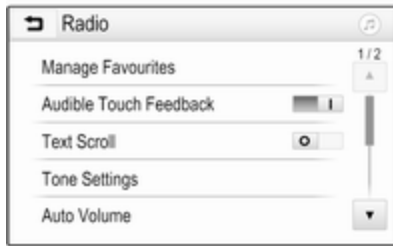

If you wish the text to be scrolled continually, activate **Text Scroll**.

If you wish the text to be scrolled in blocks, deactivate the setting.

### Black display function

If you do not want to see the illuminated display, e.g. during night time, you can turn the display off.

Press  and then select **Settings**.

Scroll through the list and select **Turn Display Off**. The display is turned off; the audio functions remain active.

### Factory defaults

Press  and then select **Settings**.

Scroll through the list and select **Return to Factory Settings**.

To restore all vehicle personalisation settings, select **Restore Vehicle Settings**.

To delete the paired Bluetooth devices, the contacts list and the voice mail numbers stored, select **Clear All Private Data**.

To reset tone and volume settings, delete all favourites, and erase the ringtone selection, select **Restore Radio Settings**.

In each case, a warning message is displayed. Select **Continue** to reset the settings.

### System version

Press  and then select **Settings**.

Scroll through the list and select **Software Information**.

If a USB device is connected, you may save the vehicle information to this USB device.

Select **System Update** and then **Save Vehicle Info to USB**.

For a system update, contact your workshop.

### Vehicle settings


**Vehicle settings** are described in the Owner's Manual.

# Radio

Usage .....	20
Station search .....	20
Favourite lists .....	22
Radio data system (RDS) .....	23
Digital audio broadcasting .....	24

## Usage

### Activating radio

Press  and then select **AUDIO**. The audio main menu last selected is displayed.

Select **Source** in the bottom line of the active radio main menu to open the interaction selector bar.





Select the desired waveband.

The station last played in the selected waveband will be received.



## Station search

### Automatic station search



Briefly press or touch  or  on the control panel or on the screen to play the previous or next station in the station memory.

### Manual station search

Press and hold  or  on the control panel. Release when the required frequency has almost been reached.

A search is made for the next station that can be received and it is played automatically.

**Notice**

FM waveband: when the RDS function is activated, only RDS stations ⇨ 23 are searched for, and when the radio traffic service (TP) is activated, only traffic service stations ⇨ 23 are searched for.

**Station tuning**

Touch **Tune** on the screen. The **Direct tune** display is shown.



Enter the desired frequency. Use **←** to delete digits entered. If necessary, touch **◀** or **▶** to subsequently adjust the input.

Confirm the input to play the station.

**Station lists**

Select **Menu** in the bottom line of the active radio main menu to open the corresponding waveband-specific submenu.



Select the waveband-specific **Station List**. All receivable stations of the relevant waveband and in the current reception area are displayed.

Select the desired station.

**Notice**

The currently received radio station is indicated by the **▶** symbol next to the station name.

**Category lists**

Numerous radio stations broadcast a PTY code, which specifies the type of programme transmitted (e.g. news). Some stations also change the PTY code depending on the content which is currently transmitted.

The Infotainment system stores these stations, sorted by programme type in the corresponding category list.

**Notice**

The **Categories** list item is only available for the FM and the DAB wavebands.

To search for a programme type determined by the stations, select **Categories**.

A list of programme types currently available is displayed.

Select the desired programme type. A list of stations is displayed transmitting a programme of the selected type.

Select the desired station.

**Notice**

The currently received radio station is indicated by the ► symbol next to the station name.

**Update station lists**

If the stations stored in a waveband-specific station list can no longer be received, select **Menu** in the bottom line of the active radio main menu and then select the respective menu item to update the station list, e.g. **Update Station List**.

**Notice**

If a waveband-specific station list is updated, the corresponding category list is also updated.

A station search is started and a corresponding message is displayed. Once the search is finished, the respective station list is displayed.

**Notice**

The currently received radio station is indicated by the ► symbol next to the station name.

**Favourite lists**

Stations of all wavebands can be stored manually in the favourite lists.



Five favourite lists are available, in each of which 5 stations may be stored.

**Notice**

The currently received station is highlighted.

**Storing a station**

If required, touch < or > to scroll through the favourite pages.

To store the currently active radio station to a preset screen button: touch and hold the desired screen button for a few seconds. The corresponding frequency or station name is displayed on the screen button.

**Retrieving stations**

If required, touch < or > to scroll to the desired favourite page.

Select the preset screen button on which the desired radio station is stored.

**Defining the number of available favourites pages**

To define the number of favourites pages displayed for selection, press **HOME** and then select **SETTINGS** on the screen.

Select **Radio** and then **Manage Favourites** to display the respective submenu.

Depending on which favourites pages you want to be displayed, activate or deactivate the pages.

## Radio data system (RDS)

RDS is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

### Advantages of RDS

- On the display, the programme name of the station appears instead of its frequency.
- During a station search, the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (alternative frequency).
- Depending on the station that is received, the Infotainment system displays radio text that can contain e.g. information on the current programme.

## RDS configuration

Touch **Menu** in the bottom line of the FM radio main menu to open the corresponding waveband-specific submenu.

Scroll to **RDS**.

Activate or deactivate **RDS**.

## Traffic Programme

Radio traffic service stations are RDS stations that broadcast traffic news. If the traffic service is switched on, the current audio source is interrupted for the duration of the traffic announcement.

### Activating the traffic programme function

Select **Menu** in the bottom line of the FM radio main menu to open the corresponding waveband-specific submenu.


Touch the screen button next to **Traffic Programme** to activate or deactivate the function.

## Notice

In the station list, TP is displayed next to the stations providing a traffic programme.

If the radio traffic service is activated, **[TP]** is shown in the top line of all main menus. If the current station is not a radio traffic service station, TP is greyed-out and a search is started automatically for the next radio traffic service station. As soon as a radio traffic service station is found, **TP** is highlighted. If no radio traffic service station is found, TP remains greyed-out.

If a traffic announcement is broadcasted on the respective station, a message is displayed.

To interrupt the announcement and return to the function previously activated, touch the screen or press .

## Regionalisation

Sometimes RDS stations broadcast regionally different programmes on different frequencies.

Select **Menu** in the bottom line of the FM radio main menu to open the corresponding waveband-specific submenu and scroll to **Region**.

Activate or deactivate **Region**.

If regionalisation is activated, alternative frequencies with the same regional programmes are selected where necessary. If regionalisation is switched off, alternative frequencies of the stations are selected without regard to regional programmes.

## Digital audio broadcasting

DAB broadcasts radio stations digitally.

DAB stations are indicated by the programme name instead of the broadcasting frequency.

### General information

- With DAB, several radio programmes (services) can be broadcasted on a single ensemble.
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated

data and a multitude of other data services including travel and traffic information.

- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- In the event of poor reception, the volume is reduced automatically to avoid the output of disagreeable noises.

If the DAB signal is too weak to be picked up by the receiver, reception is interrupted completely. This incident can be avoided by activating **DAB-DAB Linking** and/or **DAB-FM Linking** in the DAB menu (see below).

- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.
- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is

improved, whereas AM or FM reception is considerably impaired in such cases.

- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the background and continually searches for the FM stations with the best reception. If TP ⇨ 23 is activated, traffic announcements of the FM station with the best reception are issued. Deactivate TP if DAB reception should not be interrupted by FM traffic announcements.

### DAB Announcements

Besides their music programmes, a lot of DAB stations also broadcast announcements of various categories. If you activate some or all categories, the currently received DAB service is interrupted when an announcement of these categories is made.

Select **Menu** in the bottom line of the DAB radio main menu to open the corresponding waveband-specific submenu.



Scroll through the list and select **DAB Announcements** to display a list of the categories available.

Activate all or just the desired announcement categories. Different announcement categories can be selected at the same time.

### DAB-DAB Linking

If this function is activated, the device switches over to the same service (programme) on another DAB ensemble (if available) when the DAB signal is too weak to be picked up by the receiver.

Select **Menu** in the bottom line of the DAB radio main menu to open the corresponding waveband-specific submenu.

Scroll through the list and activate or deactivate **DAB-DAB Linking**.

### DAB-FM Linking

If this function is activated, the device switches over to a corresponding FM station of the active DAB service (if available) when the DAB signal is too weak to be picked up by the receiver.

Scroll through the list and activate or deactivate **DAB-FM Linking**.

### L Band

With this function, you may define which DAB wavebands are to be received by the Infotainment system.

L Band (earth and satellite radio) is another radio band that can be received additionally.

Select **Menu** in the bottom line of the DAB radio main menu to open the corresponding waveband-specific submenu.

Scroll through the list and activate or deactivate **L Band**.

### Intellitext

The **Intellitext** function allows the reception of additional information such as financial information, sports, news etc.

#### Notice

The content available depends on the station and region.

Select **Menu** in the bottom line of the DAB radio main menu to open the corresponding waveband-specific submenu.

Scroll through the list and select **Intellitext**.

Select one of the categories and choose a specific item to display detailed information.

### EPG

The Electronic Programme Guide provides information on the current and upcoming programme of the respective DAB station.

Select **Menu** in the bottom line of the DAB radio main menu and then select **Station List**.

To display the programme of the desired station, touch the icon next to the station.

## External devices

General information .....	26
Playing audio .....	28
Displaying pictures .....	29
Playing movies .....	31
Using smartphone applications ...	32

### General information

An AUX and USB socket for the connection of external devices is located in the centre console.

#### Notice

The sockets must always be kept clean and dry.

### AUX input

It is possible to connect e.g. an iPod or another auxiliary device with a 3.5 mm jack plug to the AUX input.

When connected to the AUX input, the audio signal of the auxiliary device is transmitted via the speakers of the Infotainment system.

The volume and the tone settings can be adjusted via the Infotainment system. All other control functions must be operated via the auxiliary device.

### Connecting a device

To connect the auxiliary device to the AUX input socket of the Infotainment system, use a 3-pole connector for audio and a 4-pole connector for movie sources.

Connect the AUX device to the AUX port.

### USB port

An MP3 player, USB drive, SD card (via USB connector/adapter), iPod or smartphone can be connected to the USB port.

The Infotainment system can play audio files, show picture files or play movie files contained in USB storage devices.

When connected to the USB port, various functions of the devices mentioned above can be operated via the controls and menus of the Infotainment system.

#### Notice

Not all MP3 players, USB drives, iPod models or smartphones are supported by the Infotainment system. Check the compatibility list on our website.

### Connecting/disconnecting a device

Connect one of the devices mentioned above to the USB port. If required, use the appropriate connection cable. The music function starts automatically.

#### Notice

If a non-readable USB device or iPod is connected, a corresponding error message appears and the Infotainment system automatically switches to the previous function.

To disconnect the USB device or iPod, select another function and then remove the USB storage device.


#### Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

### USB Auto Launch

By default, the USB audio menu is displayed automatically as soon as a USB device is connected.

If desired, this function can be deactivated.

Press  and then select **Settings** to open the settings menu.

Select **Radio**, scroll to **USB Auto Launch** and touch the screen button next to the function.


To reactivate the function, touch the screen button again.

### Bluetooth

Bluetooth enabled audio sources (e.g. music mobile phones, MP3 players featuring Bluetooth, etc.), which support the Bluetooth music profiles A2DP and AVRCP can be connected wirelessly to the Infotainment system.

The Infotainment system can play music files contained in Bluetooth devices e.g. smartphones or iPod/iPhone products.

### Connecting a device

For a detailed description on how to establish a Bluetooth connection  35.

### File formats and folders

This product can support USB storage device with a storage capacity of 5000 files (music, photo and video), and 15 stages of folder structure. Normal usage cannot be guaranteed for storage devices that exceed this limit. The iPod/iPhone can play all music files supported. But the music file lists are displayed up to 5000 files on the screen in alphabetical order.

#### Notice

Some files may not be played properly. This may be due to a different recording format or the condition of the file.

Files from online shops to which Digital Rights Management (DRM) has been applied cannot be played.

The Infotainment system can play the following audio, picture and movie files stored on external devices.

#### Audio files

MP3 (MPEG-1 Layer 3, MPEG-2 Layer 3)

Constant Bit Rate (CBR) between 8 and 320 kbps

Variable Bit Rate (VBR)

Sampling frequencies of 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 kHz.

Windows Media Audio

Windows Media Audio 10

CBR between 32 and 768 kbps

VBR (Standard), Professional, Lossless, or higher according to Microsoft specifications

Sampling frequencies of 8, 12, 16, 22, 32, 44.1, and 48 kHz

AAC (MPEG-4 AAC, Low Complexity Profile) and AAC+

CBR between 8 and 320 kbps.

OGG Vorbis

Waveform (WAV – PCM Windows format)

Audio Interchange File Format (AIFF)

3GPP (Generally used for mobile devices)

Audio Books (MP3, WMA, AAC, AA)

### Picture files

Only the following file extensions are supported: '\*.jpg', '\*.bmp', '\*.png', '\*.gif' (Animated GIF is not supported.) Some files may not operate due to a different format or the condition of file.

### Movie files

The playable movie file formats are AVI and MP4.

The maximum resolution is 1280 x 720 pixels. The frame rate must be less than 30 fps.

The usable codec is H.264/MPEG-4 AVC.

The playable audio formats are MP3, AC3, AAC and WMA.

The displayable subtitle format is SMI.


## Playing audio

### Activating the music function

If the device is not yet connected to the Infotainment system, connect the device ⇨ 26.

Usually, the respective audio main menu is displayed automatically.

If playback is not started automatically e.g. if **USB Auto Launch** is deactivated ⇨ 26, take the following steps:

Press  and then select **AUDIO** to open the audio main menu last selected.

Select **Source** in the interaction selector bar and then select the desired audio source to open the respective audio main menu.

Playback of the audio tracks starts automatically.



## Function buttons

### Notice

During AUX playback, the function buttons are not available.

### Interrupting and resuming playback

Touch **II** to interrupt playback. The screen button changes to **▶**.

Touch **▶** to resume playback.

### Playing the next or previous track

Touch **▶▶** to play the next track.

Touch **◀◀** within the first 2 seconds of the track playing to return to the previous track.

### Returning to the beginning of the current track

Touch **◀◀** after 2 seconds of the track playing.

### Fast forwarding and rewinding

Touch and hold **◀◀** or **▶▶**. Release to return to normal playback mode.

Alternatively, you can move the slider showing the current track position to the left or right.

## Playing tracks randomly

Touch **⌘** to play the tracks in random order. The screen button changes to **⌘**.

Touch **⌘** again to deactivate the shuffle function and go back to the normal playback mode.


## Browse Music function

### Notice

The browse function is not available for AUX sources and, depending on the device, it may only be partially available for Bluetooth sources.

To display the browse screen, touch the screen. Alternatively, select **Menu** in the bottom line of the audio main screen to display the respective audio menu and then select **Browse Music**.

Different categories, in which the tracks are sorted, are displayed, e.g. **Playlists**, **Artists**, or **Albums**.

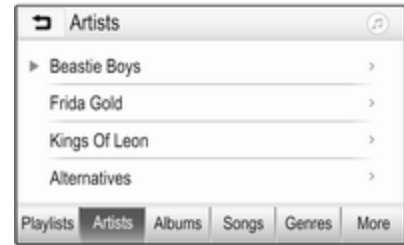

Select the desired category, subcategory (if available) and then choose a track.

Select the track to start playback.

## Displaying pictures


You can view pictures from a USB device connected to the USB port.


### Notice

For your safety, some features are disabled while driving.

## Activating the picture function

If the device is not yet connected to the Infotainment system, connect the device ↻ 26.

Press  and then select **GALLERY** to open the media main menu.


Touch  to open the picture main menu to display a list of items stored on the USB device. Select the desired picture.



Touch the screen to hide the menu bar. Touch the screen again to redisplay the menu bar.

### Function buttons

#### Full screen mode

Select  to display the picture in full screen mode. Touch the screen to exit full screen mode.


**Viewing the next or previous picture**  
Touch > or swipe to the left to view the next picture.

Touch < or swipe to the right to view the previous picture.


#### Rotating a picture

Select  to rotate the picture.

#### Zoom in on a picture

Touch  once or several times to zoom in on a picture or to return to its original size.


#### Viewing a slide show

Select  to view the pictures stored on the USB device in a slide show.

Touch the screen to end the slide show.

#### Picture menu

Select **Menu** in the bottom line of the screen to display the **Picture Menu**.

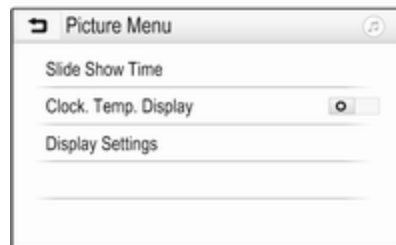

#### Slide show time

Select **Slide Show Time** to display a list of possible time sequences. Activate the desired time sequence in which one picture is intended to be displayed in a slide show.

#### Clock and temperature display

If you want the time and temperature to be displayed in full screen mode, activate **Clock. Temp. Display**.

#### Display settings

Select **Display Settings** to open a submenu for the adjustment of brightness and contrast.

Touch + or - to adjust the settings.

## Playing movies


You can view movies from a USB device connected to the USB port.


### Notice

For your safety, the movie function is not available while driving.

## Activating the movie function

If the device is not yet connected to the Infotainment system, connect the device ↗ 26.

Press  and then select **GALLERY** to open the media main menu.


Touch  to open the movie main menu and then select the desired folder and/or movie.

The movie is shown.



## Function buttons

### Full screen


Select  to display the movie in full screen mode. Touch the screen to exit full screen mode.


### Interrupting and resuming playback

Touch  to interrupt playback. The screen button changes to .

 
Touch  to resume playback.

### Playing the next or previous track


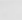
Touch  to play the next movie file.

Touch  within the first 5 seconds of the movie playing to return to the previous movie file.

## Returning to the beginning of the current movie

Touch  after 5 seconds of the movie playing.

## Fast forwarding and rewinding

Touch and hold  or . Release to return to normal playback mode.

## Movie menu

Select **Menu** in the bottom line of the screen to display the **Movie Menu**.



## Clock and temperature display

If you want the time and temperature to be displayed in full screen mode, activate **Clock. Temp. Display**.

### Display settings

Select **Display Settings** to open a submenu for adjustment of brightness and contrast.

Touch + and - to adjust the settings.

### Using smartphone applications

The phone projection applications Apple CarPlay and Android Auto display selected apps from your smartphone on the Infotainment screen and allow their operation directly via the Infotainment controls.

Check with the device's manufacturer if this function is compatible with your smartphone and if this application is available in the country you live in.

### Preparing the smartphone

Android phone: Download the Android Auto app to your smartphone from the Google Play store.

iPhone: Make sure SIRI is activated on your smartphone.


### Activating phone projection in the settings menu

Press  to display the Home screen and then select **SETTINGS**.


Scroll through the list to **Apple CarPlay** or **Android Auto**.

Make sure the respective application is activated.

### Connecting the mobile phone


Connect the smartphone to the USB port  26.

### Starting phone projection

To start the phone projection function, press  and then select **PROJECTION**.

#### Notice

If the application is recognised by the Infotainment system, the application icon may change to **Apple CarPlay** or **Android Auto**.

To start the function, you can alternatively press and hold  for a few seconds.

The phone projection screen displayed depends on your smartphone and software version.

### Returning to the Infotainment screen

Press .



# Speech recognition

General information .....	33
Usage .....	33



## General information

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone. See your smartphone manufacturer's user guide to find out whether your smartphone supports this feature.

In order to use the voice pass-thru application, the smartphone must be connected to the Infotainment system via USB cable ↻ 26 or via Bluetooth ↻ 35.


## Usage

### Activating speech recognition


Press and hold  on the control panel or  on the steering wheel to start a speech recognition session. A voice command message is displayed on the screen.

As soon as a beep is heard, you can say a command. For information on the commands supported, see the operating instructions for your smartphone.

### Adjusting the volume of voice prompts

Turn  on the control panel or press **+ / -** on the right side of the steering wheel to increase or decrease the volume of voice prompts.

### Deactivating speech recognition

Press  on the steering wheel. The voice command message disappears and the speech recognition session is ended.

# Phone

General information .....	34
Bluetooth connection .....	35
Emergency call .....	37
Operation .....	38
Mobile phones and CB radio equipment .....	42

## General information

The phone portal provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the phone portal, the mobile phone must be connected to the Infotainment system via Bluetooth.

Not all phone functions are supported by every mobile phone. The usable phone functions depend on the relevant mobile phone and network provider. You can find further information on this in the operating instructions for your mobile phone, or you can enquire about them with your network provider.

## Important information for operation and traffic safety

### Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

### Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the hands-free facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if

interference is caused by the mobile phone or if dangerous situations can occur.

## Bluetooth

The phone portal is certified by the Bluetooth Special Interest Group (SIG).

You can find further information about the specification on the Internet at <http://www.bluetooth.com>

## Bluetooth connection


Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, smartphones, iPod/iPhone models, or other devices.

Via the **Bluetooth** menu, pairing (PIN code exchange between Bluetooth device and Infotainment system) and connecting of the Bluetooth devices to the Infotainment system are carried out.

## Bluetooth menu

Press  and then select **SETTINGS**.

Select **Bluetooth** to display the Bluetooth menu.

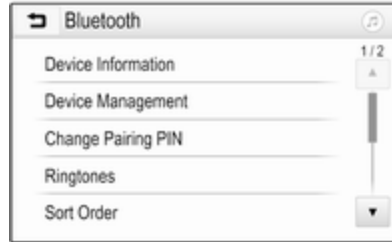

## Pairing a device


### Important information

- Up to ten devices can be paired to the system.
- Only one paired device can be connected to the Infotainment system at a time.
- Pairing normally only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has

been connected previously, the Infotainment system establishes the connection automatically.

- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the USB port for charging.

## Pairing a new device

1. Activate the Bluetooth function of the Bluetooth device. For further information, see the user guide of the Bluetooth device.
2. Press  and then select **SETTINGS** on the Info-Display. Select **Bluetooth** and then **Device Management** to display the respective menu.



### Notice

If no phone is connected, the **Device Management** menu can also be accessed via the phone menu: Press and then select **PHONE**.

3. Touch **Search Device**. All discoverable Bluetooth devices in the environment are displayed in a new search list.
4. Touch the Bluetooth device you wish to pair.
5. Confirm the pairing procedure:
  - If SSP (secure simple pairing) is supported:

Confirm the messages on the Infotainment system and the Bluetooth device.

- If SSP (secure simple pairing) is not supported:

On the Infotainment system: an **Info** message is displayed asking you to enter a PIN code on your Bluetooth device.

On the Bluetooth device: enter the PIN code and confirm your input.

6. The Infotainment system and the device are paired.

### Notice

If the Bluetooth device is successfully paired, next to the Bluetooth device indicates that the phone function is enabled and indicates that the Bluetooth music function is enabled.

7. The phone book is downloaded automatically to the Infotainment system. Depending on the phone, the Infotainment system has to be allowed access to the phone book. If required, confirm the

messages displayed on the Bluetooth device.

If this function is not supported by the Bluetooth device, a corresponding message is displayed.

### Changing the Bluetooth PIN code

Press and then select **SETTINGS**.

Select **Bluetooth** and then **Change Pairing PIN** to display the respective submenu. A keypad is displayed.

Enter the desired four-digit PIN code.

To delete an entered number, select .

Confirm your input by selecting **Enter**.

### Connecting a paired device

Press and then select **SETTINGS**.

Select **Bluetooth** and then **Device Management** to display the respective menu.

Select the Bluetooth device you wish to connect. The device is connected.

### Notice

The connected device and the available options are highlighted.

### Disconnecting a device

Press  and then select **SETTINGS**.

Select **Bluetooth** and then **Device Management** to display the respective menu.


Select the Bluetooth device currently connected. You are prompted with a message.

Select **Yes** to disconnect the device.

### Deleting a device

Press  and then select **SETTINGS**.

Select **Bluetooth** and then **Device Management** to display the respective menu.

Select  next to the Bluetooth device. You are prompted with a message.

Select **Yes** to delete the device.

### Device info

Press  and then select **SETTINGS**.

Select **Bluetooth** and then **Device Information** to display the respective menu.

The information displayed includes **Device Name, Address, and PIN Code**.

### Emergency call

#### Warning

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e.g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

#### Warning

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile

phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

### Making an emergency call

Dial the emergency call number (e.g. **112**).

The telephone connection to the emergency call centre is set up.

Answer when the service personnel questions you about the emergency.

#### Warning

Do not end the call until you are requested to do so by the emergency call centre.

## Operation

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate many functions of your mobile phone via the Infotainment system.

### Notice


In the hands-free mode, mobile phone operation continues to be possible, e.g. taking a call or adjusting the volume.

After the setup of a connection between the mobile phone and the Infotainment system, mobile phone data is transmitted to the Infotainment system. This can take some time depending on the mobile phone and the amount of data to be transferred. During this period, operation of the mobile phone via the Infotainment system is possible only to a limited extent.

### Notice

Not every mobile phone supports all functions of the phone portal. Therefore, deviations from the range of functions described below are possible.

## Phone main menu

Press  and then select **PHONE** to display the respective menu.



### Notice

The **PHONE** main menu is only available if a mobile phone is connected to the Infotainment system via Bluetooth. For a detailed description ⇨ 35.


Many functions of the mobile phone can now be controlled via the phone main menu (and associated submenus), and via the phone-specific controls on the steering wheel.



## Initiating a phone call

### Entering a phone number

Press  and then select **PHONE**.

Enter a telephone number using the keypad in the phone main menu.

To delete one or more entered characters, touch or touch and hold .

Touch  on the screen or press  on the steering wheel to start dialling.

## Using the phone book

### Notice

When pairing a mobile phone with the Infotainment system via Bluetooth, the phone book of the mobile phone is downloaded automatically ⇨ 35.

Press  and then select **PHONE**.

Select **Contacts** in the phone main menu.




### Quick search

1. Select **⌘** to display a list of all contacts.
2. Scroll through the list of contacts entries.
3. Touch the contact you wish to call. A menu with all phone numbers stored for the selected contact is displayed.
4. Select the desired phone number to initiate the call.

### Search menu

If the phone book contains a large number of entries, you can search for the desired contact via the search menu.

Select **⌘** in the **Contacts** menu to display the search tab.

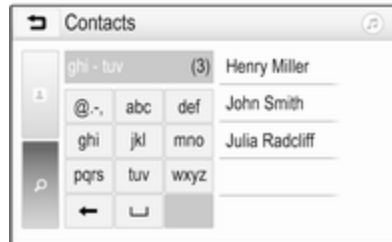

The letters are organised in alphabetical groups on the screen buttons: **abc**, **def**, **ghi**, **jkl**, **mno**, **pqrs**, **tuv**, and **wxyz**.

Use **⌘** to delete an entered group of letters.

1. Select the button containing the first letter of the contact you wish to search for.

For example: If the contact you wish to search for starts with 'g' select the **ghi** screen button.

All contacts containing one of the letters on this button, in the example 'g', 'h', and 'i', are displayed.

2. Select the button containing the second letter of the contact you wish to search for.
3. Continue to enter more letters of the contact you wish to search for until the desired contact is displayed.
4. Touch the contact you wish to call. A menu with all phone numbers stored for the selected contact is displayed.
5. Select the desired phone number to initiate the call. The following display is shown.



### Contacts settings

The contacts list can be sorted by last name or first name.

Press and then select **SETTINGS** to display the respective menu.

Select **Bluetooth** and then **Sort Order**. Activate the desired option.

### Using the call history

All incoming, outgoing, or missed calls are registered.

Press and then select **PHONE**.

Select **Call History** in the phone main menu.



Select for outgoing calls, for missed calls, for incoming calls and for all calls. The respective call list is displayed.

Select the desired entry to initiate a call.

### Redialling a number

The last dialled phone number can be redialled.

Press and then select **PHONE**.

Select on the screen or press on the steering wheel.

### Using speed dial numbers

Speed dial numbers that are stored on the mobile phone can also be dialled using the keypad of the phone main menu.

Press and then select **PHONE**.

Touch and hold the respective digit on the keypad to initiate the call.

### Incoming phone call



#### Taking a call

If an audio mode, e.g. the radio or USB mode, is active at the moment a call comes in, the audio source is muted and stays muted until the call ends.



A message with the caller's phone number or name (if available) is displayed.






To answer the call, select  in the message or press  on the steering wheel.

### Rejecting a call

To reject the call, select  in the message or press  on the steering wheel.

### Changing the ring tone

Press  and then select **SETTINGS**. Select **Bluetooth** and then **Ringtones** to display the respective menu. A list of all devices paired is displayed. Select the desired device. A list of all ringtones available for this device is displayed.


Select one of the ringtones.


### Functions during a call

During an ongoing phone call the phone main menu is displayed.




### Deactivating the hands-free mode temporarily

To continue the conversation via the mobile phone, activate .

To return to the hands-free mode, deactivate .

### Deactivating the microphone temporarily

To mute the microphone, activate .

To reactivate the microphone, deactivate .

### Ending a phone call

Select  to end the call.

### Voice mail box

You may operate your voice mail box via the Infotainment system.

### Voice mail number

Press  and then select **SETTINGS**.

Select **Bluetooth**. Scroll through the list and select **Voice Mail Numbers**.


A list of all paired devices is displayed.

Select the respective phone. A keypad is displayed.

Enter the voice mail number for the respective phone.

### Calling the voice mail box

Press  and then select **PHONE**.

Select  on the screen. The mail box is called.

Alternatively, enter the voice mail number via the phone keypad.

## Mobile phones and CB radio equipment

### Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and hands-free manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/EC).

Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible
- Maximum transmission power 10 watts
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, section **Airbag system**.

Seek advice on predetermined installation points for the external antenna or equipment holder and

ways of using devices with a transmission power exceeding 10 watts.

Use of a hands-free attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 watts for GSM 900 or 1 watt for the other types.

For reasons of safety, do not use the phone while driving. Even use of a hands-free set can be a distraction while driving.

### Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

### Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.



# Index

## A

Activating AUX audio.....	28
Activating Bluetooth music.....	28
Activating iPod audio.....	28
Activating phone.....	38
Activating phone projection.....	32
Activating radio.....	20
Activating USB audio.....	28
Activating USB movie.....	31
Activating USB picture.....	29
Audio files.....	26
Auto volume.....	17

## AUX

AUX audio menu.....	28
Connecting device.....	26
General information.....	26

## B

Basic operation.....	14
Bluetooth	
Bluetooth connection.....	35
Bluetooth music menu.....	28
Connecting device.....	26
General information.....	26
Pairing.....	35
Phone.....	38
Bluetooth connection.....	35

## C

Call	
Functions during a call.....	38
Incoming call.....	38
Initiating a phone call.....	38
Ring tone.....	38
Call history.....	38
Control elements	
Infotainment system.....	8
Steering wheel.....	8
Control elements overview.....	8

## D

DAB.....	24
Digital audio broadcasting.....	24
Displaying pictures.....	29
Display settings.....	29, 31

## E

Emergency call.....	37
---------------------	----

## F

Favourite lists.....	22
Retrieving stations.....	22
Storing stations.....	22
File formats	
Audio files.....	26
Movie files.....	26
Picture files.....	26

<b>G</b>			
General information.....	26, 33, 34	Menu.....	14
AUX.....	26	Phone.....	38
Bluetooth.....	26	Radio.....	20
DAB.....	24	<b>P</b>	
Infotainment system.....	6	Pairing.....	35
Phone.....	34	Phone	
Smartphone applications.....	26	Bluetooth.....	34
USB.....	26	Bluetooth connection.....	35
<b>H</b>		Call history.....	38
Home menu.....	14	Emergency calls.....	37
<b>I</b>		Entering a number.....	38
Infotainment control panel.....	8	Functions during a call.....	38
Intellitext.....	24	General information.....	34
iPod.....	26	Incoming call.....	38
Connecting device.....	26	Phone book.....	38
iPod audio menu.....	28	Phone main menu.....	38
<b>M</b>		Selecting the ring tone.....	38
Maximum startup volume.....	17	Speed dial number.....	38
Menu operation.....	14	Phone book.....	38
Mobile phones and CB radio		Phone projection.....	32
equipment.....	42	Picture files.....	26
Movie files.....	26	Playing audio.....	28
Mute.....	11	Playing movies.....	31
<b>O</b>		<b>R</b>	
Operation.....	38	Radio	
External devices.....	26	Activating.....	20
		Configuring DAB.....	24
		Configuring RDS.....	23
		DAB announcements.....	24
		Digital audio broadcasting	
		(DAB).....	24
		Favourite lists.....	22
		Intellitext.....	24
		Radio data system (RDS).....	23
		Regional.....	23
		Regionalisation.....	23
		Retrieving stations.....	22
		Selecting the waveband.....	20
		Station search.....	20
		Station tuning.....	20
		Storing stations.....	22
		Usage.....	20
		Radio data system (RDS).....	23
		RDS.....	23
		Regional.....	23
		Regionalisation.....	23
		Retrieving stations.....	22
		Ring tone	
		Changing the ring tone.....	38
		Ring tone volume.....	17
		<b>S</b>	
		Smartphone.....	26
		Phone projection.....	32
		Speech recognition.....	33
		Speed dial numbers.....	38
		Station search.....	20
		Steering wheel audio controls.....	8
		Storing stations.....	22

Switching the Infotainment system on.....	11
System settings.....	18

**T**

Theft-deterrent feature .....	7
Tone settings.....	16
Touch beep volume.....	17
TP volume.....	17

**U**

Usage.....	11, 20, 33
AUX.....	26
Bluetooth.....	26
iPod.....	26
Menu.....	14
Phone.....	38
Radio.....	20
USB.....	26

**USB**

Connecting device.....	26
General information.....	26
USB audio menu.....	28
USB movie menu.....	31
USB picture menu.....	29
Using smartphone applications....	32

**V**

Voice recognition.....	33
------------------------	----

**Volume**

Auto volume.....	17
Maximum startup volume.....	17
Mute function.....	11
Ring tone volume.....	17
Setting the volume.....	11
Speed compensated volume....	17
Touch beep volume.....	17
TP volume.....	17
Volume limitation at high temperatures.....	11
Volume settings.....	17

**W**

Waveband selection.....	20
-------------------------	----

---

# R300 BT

Introduction .....	48
Basic operation .....	56
Radio .....	60
External devices .....	65
Speech recognition .....	69
Phone .....	70
Index .....	78

# Introduction

General information .....	48
Theft-deterrent feature .....	49
Control elements overview .....	50
Usage .....	54

## General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

Using the radio tuner functions, you can register a large number of stations on different favourites pages.

You can connect external data storage devices, e.g. iPod, USB devices, or other auxiliary devices to the Infotainment system as further audio sources; either via a cable or via Bluetooth.

The digital sound processor provides you with several preset equaliser modes for sound optimisation.

In addition, the Infotainment system is equipped with a Phone portal that allows comfortable and safe use of your mobile phone in the vehicle.

Optionally, the Infotainment system can be operated using the control panel or the controls on the steering wheel.

If provided by your mobile phone, the system can also be operated via speech recognition.

## Notice

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

## Important information on operation and traffic safety

### Warning

Drive safely at all times when using the Infotainment system.

If in doubt, stop the vehicle before operating the Infotainment system.



## Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter
- multi-path reception due to reflection
- shadowing

## Theft-deterrent feature




The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

## Control elements overview

R300 BT



1		54
	If switched off: short press: switch power on	
	If switched on: short press: mute system; long press: switch power off	
	Turn: adjust volume	
2	<b>RADIO</b>	
	Activate radio or change waveband .....	60
3	<b>MEDIA</b>	
	Activate media or change media source .....	67
4	 	
	Radio: short press: skip to previous or next station; press and hold: seek down or up .....	60
	External devices: short press: skip to previous or next track; press and hold: rewind or fast forward .....	67

5	<b>PHONE</b>	
	Short press: open phone menu .....	70
6	<b>BACK</b>	
	Menu: one level back .....	56
	Input: delete last character or entire entry .....	56
7	<b>MENU</b> .....	56
	Turn: mark screen buttons or menu items; set numeric values	
	Press: select/activate a marked screen button or menu item; confirm set value; switch to different setting option; open application-specific menu (if available)	

8	<b>Softkeys</b>	
	Favourites: press: select favourites; press and hold: save radio stations as favourites .....	61
	Menu: press: select corresponding screen button .....	56
9	<b>FAV</b>	
	Press: display favourites bar .....	61




1	⏻ .....	54
	If switched off: short press: switch power on	
	If switched on: short press: mute system; long press: switch power off	
	Turn: adjust volume	
2	<b>RADIO</b>	
	Activate radio or change waveband .....	60
3	<b>MEDIA</b>	
	Activate media or change media source .....	67
4	⏮ ⏭	
	Radio: short press: skip to previous or next station; press and hold: seek down or up .....	
		60
	External devices: short press: skip to previous or next track; press and hold: rewind or fast forward .....	
		67
5	<b>TONE</b>	
	Display tone settings menu	

6	<b>BACK</b>	
	Menu: one level back .....	56
	Input: delete last character or entire entry .....	
		56
7	<b>MENU</b> .....	56
	Turn: mark screen buttons or menu items; set numeric values	
	Press: select/activate a marked screen button or menu item; confirm set value; switch to different setting option; open application-specific menu (if available)	
8	AUX input	
9	Softkeys	
	Favourites: press: select favourites; press and hold: save radio stations as favourites .....	
		61
	Menu: press: select corresponding screen button .....	
		56

10	<b>FAV</b>	
	Press: display favourites bar .....	
		61

## Steering wheel audio controls

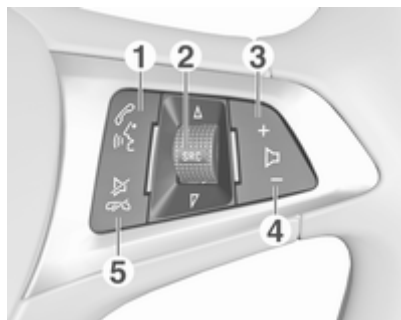

- 1   
 Short press: accept phone call ..... 70  
 or dial number in call list ..... 73  
 or switch between calls when Phone portal active and calls waiting: ..... 73  
 Long press: activate speech recognition ..... 69
- 2 **SRC** (Source) ..... 54  
 Press: select audio source .... 54

With radio active: turn upwards/downwards to select next/previous preset radio station ..... 60

With Phone portal active and call list open: turn upwards/downwards to select next/previous entry in call list ..... 73

- 3 +  
 Increase volume ..... 54
- 4 -  
 Reduce volume ..... 54
- 5   
 Short press: end/decline call ..... 73  
 or close call list ..... 73  
 or deactivate speech recognition ..... 69  
 or activate/deactivate mute ... 54

## Usage

### Control elements

The Infotainment system is operated via function buttons, a **MENU** knob and menus that are shown on the display.

Inputs are made optionally via:

- the control panel on the Infotainment system ⇨ 50
- audio controls on the steering wheel ⇨ 50
- the speech recognition ⇨ 69

### Switching the Infotainment system on or off

Press briefly. After switching on, the last selected Infotainment source becomes active.

Press and hold again to turn the system off.

### Automatic switch-off

If the Infotainment system is switched on by pressing while the ignition is switched off, it switches off again automatically after 10 minutes.

## Setting the volume

Turn  $\odot$ ; the current setting is shown on the display.

When the Infotainment system is switched on, the last selected volume is set, provided that the volume is lower than the maximum start-up volume  $\rightarrow$  57.

## Speed compensated volume

When Auto volume is activated  $\rightarrow$  57, the volume is adapted automatically to make up for the road and wind noises as you drive.

## Mute function

Press  $\odot$  to mute the audio sources.  
To cancel the mute function: turn  $\odot$ .

## Modes of operation

### Radio

Press **RADIO** to open the radio main menu or to toggle between the different wavebands.

For a detailed description of the radio functions  $\rightarrow$  60.

## External devices

Press **MEDIA** repeatedly to activate the playback mode for a connected external device.

For a detailed description on connecting and operating external devices  $\rightarrow$  65.

## Phone

Press **PHONE** to establish a Bluetooth connection between the Infotainment system and a mobile phone.

If a connection can be established, the main menu of the phone mode is displayed.

For a detailed description of mobile phone operation via the Infotainment system  $\rightarrow$  73.

If no connection can be established, a corresponding menu is displayed.

For a detailed description of preparing and establishing a Bluetooth connection between the Infotainment system and a mobile phone  $\rightarrow$  71.

## Basic operation

Basic operation .....	56
Tone settings .....	56
Volume settings .....	57
System settings .....	57

## Basic operation

### Control panel

#### MENU knob

The **MENU** knob is one of the central control elements for menu operation.

#### Turn:

- to select a screen button or menu item
- to scroll through a list of menu items
- to change a settings value

#### Press:

- to activate a selected screen button or menu item
- to confirm a changed settings value
- to switch to a different settings option
- to display the application-specific submenu

#### Notice

In subsequent chapters, the operating steps for selecting and activating a screen button or menu item will be described as "...select <button name>/<item name>".

#### BACK button

When operating the menus, press **BACK** to return to the next higher menu level.

When entering digits, press **BACK** to delete the last character entered.

#### Softkeys

Press one of the softkeys to activate the favourite or function screen button displayed immediately above the respective softkey.

#### Notice

In subsequent chapters, the operating steps for selecting and activating a screen button or menu item will be described as "...select <button name>/<item name>".

## Tone settings

In the tone settings menu, the tone characteristics can be set differently for each audio source.



Press **MENU**, select **Settings** and then select **Tone Settings** to open the tone settings menu.

### Setting bass, midrange, and treble

Scroll through the list and select **Bass**, **Midrange** or **Treble**.

Adjust the setting and confirm.

### Setting the volume distribution between front and rear

Scroll through the list and select **Fader**.

Adjust the setting and confirm.

### Setting the volume distribution between right and left

Scroll through the list and select **Balance**.

Adjust the setting and confirm.

### Selecting a tone style

Scroll through the list and select **EQ** (Equaliser).

The EQ options offer optimised bass, middle, and treble presets for the relevant style of music.

Turn **MENU** to toggle through the different options and then press **MENU** to confirm the setting.

## Volume settings

### Adjusting the speed compensated volume

Press **MENU** to open the respective audio menu.

Scroll through the list and select **Settings**.

Select **Auto Volume Control**.

The **Auto Volume** function can be deactivated or the degree of volume adaptation can be selected in the menu displayed.

Scroll through the list and select the desired option.

### Adjusting the maximum startup volume

Press **MENU** to open the respective audio menu.

Scroll through the list and select **Settings**.

Select **Maximum Startup Volume**.

Set the desired value.

 
### Volume of traffic announcements

To adjust the volume of traffic announcements, set the desired volume while a traffic announcement is given out by the system.

The respective setting is stored by the system.

## System settings

Various settings and adaptations for the Infotainment system can be performed via the settings menu.



### Time and date settings

Press **MENU** to open the respective audio menu.

Select **Time and Date**.

### Set Time

Select **Set Time** to enter the respective submenu.

Select **Auto Set** at the bottom of the screen. Activate either **On - RDS** or **Off (Manual)**.

If **Off (Manual)** is selected, adjust hours and minutes.

Repeatedly select **12-24 HR** at the bottom of the screen to choose a time mode.

If the 12-hour mode is selected, a third column for AM and PM selection is displayed. Select the desired option.

### Set Date

Select **Set Date** to enter the respective submenu.

Select **Auto Set** at the bottom of the screen. Activate either **On - RDS** or **Off (Manual)**.

If **Off (Manual)** is selected, adjust the date settings.

### Language

Press **MENU** to open the respective audio menu.

Select **Settings**, scroll through the list and select **Vehicle Settings**.

Select **Languages**.

Scroll through the list and select the desired language.

### Restore Factory Settings

Press **MENU** to open the respective audio menu.

Select **Settings**, scroll through the list and select **Vehicle Settings**.

Select **Restore Factory Settings** to enter the respective submenu.

Select the desired option and confirm the message.

### Software Information

The **Software Information** menu contains specific information on the software.

Press **MENU** to open the respective audio menu.

Select **Settings**, scroll through the list and select **Vehicle Settings**.

Select **Software Information**.

### Valet mode

If valet mode is activated, all vehicle displays are locked and no changes may be performed within the system.

#### Notice

Vehicle-related messages remain enabled.

### Locking the system

Press **MENU** to open the respective audio menu.

Select **Settings**, scroll through the list and select **Vehicle Settings**.

Select **Valet Mode**. A keypad is displayed.

Enter a four-digit code and select **Enter**. The keypad is redisplayed.

To confirm the first input, reenter the four-digit code and select **Lock**. The system is locked.

### Unlocking the system

Turn the Infotainment system on. A keypad is displayed.

---

Enter the respective four-digit code and select **Unlock**. The system is unlocked.

**Forgotten PIN code**

To reset the PIN code to the default setting, contact your workshop.

# Radio

Usage .....	60
Station search .....	60
Favourite lists .....	61
Radio data system (RDS) .....	62
Digital audio broadcasting .....	63

## Usage



### Activating the radio function

Press **RADIO**.

### Selecting the waveband

Repeatedly press **RADIO** on the control panel to toggle between the different wavebands.

### Station search

#### Automatic station search

Press **◀** or **▶** to play the previous or next station.

#### Manual station search

Press and hold **◀** or **▶**. Release the button when the required frequency has almost been reached.

## Manual tuning

Press **MENU** to open the waveband menu and then select **Manual Tuning**.

Depending on the waveband selected, a list of all frequencies is displayed.

Select the desired frequency.

## Station lists

If the station list is updated, turn **MENU** to display a list of all stations currently receivable.

Scroll through the list and select the desired station.

## Category lists

Numerous radio stations broadcast a PTY code, which specifies the type of programme transmitted (e.g. news). Some stations also change the PTY code depending on the content which is currently transmitted.

The Infotainment system stores these stations, sorted by programme type in the corresponding category list.

### Notice

The **Categories** list item is only available for the FM and the DAB wavebands.

FM waveband ⇨ 62.

DAB ⇨ 63.

Press **MENU** to display the respective waveband menu and select **Categories**.

A list of programme type categories currently available is displayed.

Select the desired category. A list of stations is displayed transmitting a programme of the selected type.

Select the desired station.

### Updating the station lists

 
Press **MENU** to open the waveband menu and select **Update Station List**. The respective station list is updated.

### Notice

If a waveband-specific station list is updated, the corresponding category list is also updated.

## Favourite lists

Stations of all wavebands can be stored manually in the favourite lists.



24 individual favourite locations are available, displayed in four favourites per favourites page.

To display the favourites list, select **FAV**.

### Storing a station

Set the station to be stored.

Select and hold the respective favourite screen button until a beeping sound is given out and the station name is displayed on the respective favourites screen button.

The station is stored as a favourite.

## Retrieving a station

If necessary, repeatedly press **FAV** to scroll to the respective favourites page.

Select the desired favourite screen button. The respective radio station is played.

### Notice

The active favourite is highlighted.

## Defining the number of favourites shown

Press **MENU**, scroll through the list and select **Set Number of Favourite Pages**.

Select the desired option.

### Notice

If the number of favourites stored exceeds the number of favourites activated in the settings menu, the additionally stored favourites are not deleted but just hidden from the view. They may be reactivated by increasing the number of viewable favourites.

## Radio data system (RDS)

RDS is a service of FM stations that considerably improves the finding of the desired station and its fault-free reception.

### Advantages of RDS

- On the display, the programme name of the station appears instead of its frequency.
- During a station search the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (alternative frequency).
- Depending on the station that is received, the Infotainment system displays radio text that can contain e.g. information on the current programme.

## RDS settings

To configure the RDS settings options, activate the radio function and then select the FM waveband. Press **MENU** to display the FM waveband menu.

### RDS

Set **RDS** to **On** or **Off**.

#### Notice

If **RDS** is set to **Off**, RDS functions are not available.

### Traffic Programme

Radio traffic service stations are RDS stations that broadcast traffic news. If the traffic service is switched on, the currently active function is interrupted for the duration of the traffic announcement.

Activate or deactivate **Traffic Program (TP)**.

If the radio traffic service is activated, **[TP]** is shown in the top line of all main menus. If the current station or media played is not a radio traffic service station, **[ ]** is displayed and a search is started automatically for the next radio traffic service station. As soon

as a radio traffic service station is found, **[TP]** is highlighted. If no radio traffic service station is found, **[ ]** remains on the screen.

If a traffic announcement is broadcasted on the respective radio traffic service station, a message is displayed.

To interrupt the announcement and return to the function previously activated, dismiss the alert.

### Region

Sometimes RDS stations broadcast regionally different programmes on different frequencies.

Set **Region** to **On** or **Off**.

If regionalisation is switched on, alternative frequencies with the same regional programmes are selected where necessary.

If regionalisation is switched off, alternative frequencies of the stations are selected without regard to regional programmes.

## Digital audio broadcasting

DAB broadcasts radio stations digitally.

### Advantages of DAB

- DAB stations are indicated by the programme name instead of the broadcasting frequency.
- With DAB, several radio programmes (services) can be broadcasted on a single frequency (ensemble).
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.
- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- In the event of poor reception, the volume is reduced automatically to avoid the output of disagreeable noises.

If the DAB signal is too weak to be picked up by the receiver, reception is interrupted completely. This can be avoided by activating **DAB to DAB Linking** and/or **DAB to FM Linking** in the DAB option menu (see below).

- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.
- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the background and continually searches for the FM stations with the best reception. If TP ⇄ 62 is activated, traffic announcements of the FM station with the best reception are issued. Deactivate

TP if DAB reception should not be interrupted by FM traffic announcements.

### DAB settings

To configure the DAB settings options, activate the radio function and then select the DAB waveband. Press **MENU** to display the DAB waveband menu.

### DAB Announcements

Besides their music programmes, a lot of DAB stations also broadcast announcements of various categories. If you activate some or all categories, the currently received DAB service is interrupted when an announcement of these categories is made.

Select **DAB Announcements** to display the DAB categories list.

Select the desired categories. The selected categories are marked with ✓.

### Notice

DAB announcements can only be received if the DAB waveband is activated.

**DAB to DAB Linking**

If this function is activated, the device switches over to the same service (programme) on another DAB ensemble (if available) when the DAB signal is too weak to be picked up by the receiver.

Set **DAB to DAB Linking** to **On** or **Off**.

**DAB to FM Linking**

If this function is activated, the device switches over to a corresponding FM station of the active DAB service (if available) when the DAB signal is too weak to be picked up by the receiver.

Set **DAB to FM Linking** to **On** or **Off**.

**L Band**

If **L Band** is activated, the Infotainment system receives an additional frequency range (1452 - 1492 MHz).

Set **L-Band** to **On** or **Off**.

**Intellitext**

The **Intellitext** function allows for the reception of additional information such as announcements, financial information, sports, news etc.

Select one of the categories and choose a specific item from the list to display detailed information.



## External devices

General information .....	65
Playing audio .....	67

### General information

An AUX and USB socket for the connection of external devices is located in the centre console.

Two USB ports for charging devices only are located at the rear of the centre console.

#### Notice

The sockets must always be kept clean and dry.

### AUX input

It is possible to connect e.g. an iPod, a smartphone or another auxiliary device to the AUX input.

When connected to the AUX input, the audio signal of the auxiliary device is transmitted via the speakers of the Infotainment system.

The volume and the tone settings can be adjusted via the Infotainment system. All other control functions must be operated via the auxiliary device.

The Infotainment system can play music files contained in auxiliary devices, e.g. iPod or smartphone.

### Connecting/disconnecting a device

To connect the auxiliary device to the AUX input socket of the Infotainment system, use the following cable:

3-pole for audio source.

To disconnect the AUX device, select another function and then remove the AUX device.

#### Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

### USB port

An MP3 player, USB drive, iPod or smartphone can be connected to the USB port.

When connected to the USB port, the devices mentioned above can be operated via the controls and menus of the Infotainment system.

**Notice**

Not all MP3 players, USB drives, iPod models or smartphones are supported by the Infotainment system.

The Infotainment system can play music files contained in USB storage devices or iPod/iPhone products.

**Connecting/disconnecting a device**

Connect the USB device or iPod to the USB port. For the iPod, use the appropriate connection cable.

**Notice**

If a non-readable USB device or iPod is connected, a corresponding error message appears and the Infotainment system automatically switches to the previous function.

To disconnect the USB device or iPod, select another function and then remove the USB storage device.

**Caution**

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

**MTP device settings**

For devices connected via MTP, additional settings can be adjusted in the settings menu.

In an active audio source, press **MENU**, scroll through the list and select **Settings**. Select **Phone Connection (MTP Only)**.

If you want the device to be only charged on the USB port, activate **Charge Only**. If you switch to the USB audio source while this setting is activated, you are prompted with a charging message.

If you wish to play music files stored on the device, activate **Scan Music Folder Only** or **Scan All Folder**.

**Bluetooth**

Bluetooth enabled audio sources (e.g. music mobile phones, MP3 players featuring Bluetooth, etc.), which support the Bluetooth profiles PBAP, HFP, A2DP and AVRCP can be connected wirelessly to the Infotainment system.

The Infotainment system can play music files contained in Bluetooth devices like iPod or smartphone.

**Connecting/disconnecting a device**

For a detailed description of the Bluetooth connection ↷ 71.

**Bluetooth device list**

To access the Bluetooth device list, activate the Bluetooth audio source, press **MENU** and then select **Manage Bluetooth Devices**.

For a detailed description of the Bluetooth device list ↷ 71.

**File formats**

Only devices formatted in the FAT16/32 file systems are supported.

**Notice**

Some files may not be played properly. This might be due to a different recording format or the condition of the file.

Files from online shops to which Digital Rights Management (DRM) has been applied cannot be played.

The playable MP3 and WMA files are the following:

- Bit rate: 8 kbps ~ 320 kbps
- Sampling frequency: 48 kHz, 44.1 kHz, 32 kHz (for MPEG-1) and 24 kHz, 22.05 kHz, 16 kHz (for MPEG-2)

MP3 files using VBR can be played.

When playing a file with ID3 tag information (version 1.0, 1.1, 2.2, 2.3, 2.4), the Infotainment system can display information, e.g. on the track title and artist.

**Playing audio****Starting playback**

Connect the device ⇨ 65.

Repeatedly press **MEDIA** to activate the desired media source.

Example: USB source.

**Notice**

The following operation functions are not available for AUX devices.

**Function buttons****Skipping to previous or next file**

Press ◀◀ or ▶▶ to play the previous or next track.

If ◀◀ is pressed within the first five seconds of the song playing, the system skips to the beginning of the current track.

**Fast forwarding or rewinding**

Press and hold ◀◀ or ▶▶ to rewind or fast forward.

**Playback order**

Press **MENU** in the respective audio source and scroll through the list to **Shuffle Songs**.

To play the songs on the device in random order, set **Shuffle Songs to On**.

To play the songs in normal order, set **Shuffle Songs to Off**.

**Browsing for a song**

Depending on the device, you may browse for songs in categories and subcategories or a folder structure.

**Notice**

For this function to be available, the indexing process must be completed.

**Categories**

To browse for a song, press **MENU** in the respective audio source and then select **Browse**.

Navigate through the browse structure and select the desired track.

**Folders**

To browse a song, press **MENU** and then select **Folder View**. The folder structure on the respective device is displayed.

Navigate through the folder structure and select the desired track.

# Speech recognition

General information .....	69
Usage .....	69


## General information

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone. See your smartphone manufacturer's user guide to find out whether your smartphone supports this feature.

In order to use the voice pass-thru application, the smartphone must be connected to the Infotainment system via USB cable ↻ 65 or via Bluetooth ↻ 71.


## Usage

### Activating speech recognition


Press and hold  on the steering wheel to start a speech recognition session. A voice command message is displayed on the screen.

As soon as a beep is heard, you can say a command. For information on the commands supported, see the operating instructions for your smartphone.

### Adjusting the volume of voice prompts

Turn  on the control panel or press **+ / -** on the right side of the steering wheel to increase or decrease the volume of voice prompts.

### Deactivating speech recognition

Press  on the steering wheel. The voice command message disappears, the speech recognition session is ended.

# Phone

General information .....	70
Bluetooth connection .....	71
Emergency call .....	72
Operation .....	73
Text messages .....	74
Mobile phones and CB radio equipment .....	75

## General information

The Phone portal provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the Phone portal, the mobile phone must be connected to the Infotainment system via Bluetooth.

Not all Phone functions are supported by every mobile phone. The usable phone functions depend on the relevant mobile phone and network provider. You will find further information on this in the operating instructions for your mobile phone, or you can enquire about them with your network provider.

## Important information for operation and traffic safety

### Warning

Mobile phones have effects on your environment. For this reason, safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

### Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the hands-free facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if

interference is caused by the mobile phone or if dangerous situations can occur.

## Bluetooth

The Phone portal is certified by the Bluetooth Special Interest Group (SIG).

You will find further information about the specification on the Internet at <http://www.bluetooth.com>.

## Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, iPod/iPhone models, or other devices.

To be able to set up a Bluetooth connection to the Infotainment system, the Bluetooth function of the Bluetooth device must be activated. For further information, please consult the user guide of the Bluetooth device.

Via the Phone portal, pairing (PIN code exchange between Bluetooth device and Infotainment system) and

connecting of the Bluetooth devices with the Infotainment system are carried out.

## Pairing a device

### Important information

- Up to five devices can be paired to the system.
- Only one paired device can be connected to the Infotainment system at a time.
- Pairing normally only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has been connected previously, the Infotainment system establishes the connection automatically.
- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the USB port for charging.

### Pairing the first device

1. Press **PHONE** and then select **Pair**.

A message is displayed on the Infotainment system indicating

the name and PIN code of the Infotainment system.

2. Start Bluetooth searching on the Bluetooth device to be paired.
3. Confirm pairing:
  - If SSP (secure simple pairing) is supported: Compare the PIN code (if demanded) and confirm the messages on the Infotainment system and the Bluetooth device.
  - If SSP (secure simple pairing) is not supported: Enter the Infotainment PIN code on the Bluetooth device and confirm your input.
4. The Infotainment system and the device are paired. The phone menu is displayed.
5. If available on the Bluetooth device, phone book and calls lists are downloaded to the Infotainment system. If required, confirm the respective message on your smartphone.

**Notice**

For the contacts to be read by the Infotainment system, they must be stored in the phone memory of the mobile phone.

**Pairing another device**

Press **PHONE**, scroll through the list and select **Bluetooth Devices**.

Press **Add** to start the pairing process of another device.

Proceed from step 2 of "Pairing the first device" (see above).

**Connecting a paired device**

Press **PHONE**, scroll through the list and select **Bluetooth Devices**.

Mark the desired device and select **Connect**.

If necessary, the device currently connected is disconnected. The selected device is connected.

**Disconnecting a device**

Press **PHONE**, scroll through the list and select **Bluetooth Devices**.

Mark the device currently connected and select **Disconnect**.

The device is disconnected.

**Deleting a device**

Press **PHONE**, scroll through the list and select **Bluetooth Devices**.

Mark the device you wish to delete from the device list and select **Delete**.

The device is deleted.

**Emergency call****⚠ Warning**

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e.g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

**⚠ Warning**

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

**Making an emergency call**

Dial the emergency call number (e.g. **112**).

The telephone connection to the emergency call centre is set up.

Answer when the service personnel questions you about the emergency.



**Warning**

Do not end the call until you are requested to do so by the emergency call centre.

**Operation**

 
As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate many functions of your mobile phone via the Infotainment system.

**Notice**

Not every mobile phone supports all functions of the Phone portal. Therefore, deviations from the range of functions described below are possible.

**Initiating a phone call****Keypad**

Press **PHONE** to display the phone menu.



Scroll through the list and select **Keypad**. The keypad is displayed.



Turn **MENU** to highlight the digit you wish to enter and then press **MENU** to select the respective digit. Enter the desired number.

Select  or press **BACK** to delete digits.

Select **Call** to initiate the phone call.

**Contacts**

Press **PHONE** to display the phone menu.

Select **Contacts**. The contacts list is displayed.

Scroll through the list and select the desired contacts entry. The contact is displayed.

Select one of the phone numbers stored under that contact. The number is dialled.

**Calls lists**

Press **PHONE** to display the phone menu.

Select **Recent Calls**. The recent calls list is displayed.

Depending on which call you are searching for, select **Missed**, **Received** or **Sent**.

Select one of the phone numbers stored in the recent calls list. The number is dialled.

**Incoming phone call****Taking a phone call**

If a radio or media source is active when a call comes in, the audio source is muted and remains muted until the call is ended.

A message with the caller's name or number is displayed.



 
To answer the call, select **Answer**.

### Rejecting a phone call

To reject the call, select **Ignore** in the message.

### Functions during a phone call

During a phone call, the in-call view is displayed.



### Ending a phone call

Select **End** to end the call.

### Deactivating the microphone

Select **Mute** to temporarily deactivate the microphone.

The screen button changes to **Unmute**.

To reactivate the microphone, select **Unmute**.

### Deactivating the hands-free function

To continue the conversation on your mobile phone, select **Handset**.

The screen button changes to **Hands-free**.

To reactivate the hands-free function, select **Hands-free**.


### Second incoming phone call

If a second phone call comes in, another message with the caller's name or number is displayed.

To answer the second call and set the first call on hold, select **Switch**.

To reject the call, select **Ignore** in the message.

### Switching between the phone calls

Press **PHONE** or  on the steering wheel audio control to toggle between the two calls.

Information on the call currently active are shown on the display.

### Ending the phone calls

The calls can be ended one at a time.

Select **End**. The call currently active is ended.

### Text messages

Text messages which are received while a phone is connected to the Infotainment system can be displayed on the Info-Display.

### Prerequisites

The following prerequisites must be met:

- The Bluetooth function of the respective phone must be activated (see user guide of the device).
- Dependent on the phone, it may be required to set the device to "visible" (see user guide of the device).

- The respective phone must be paired and connected to the Infotainment system. For a detailed description ⇨ 71.
- The respective phone must support Bluetooth Message Access Profile (BT MAP).

## Viewing a message

### Notice

If the vehicle is going faster than 5 mph, the text message is not displayed on the screen.

When a new text message is received, a message is displayed.



Select **View** to read the message.

## Mobile phones and CB radio equipment

### Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and hands-free manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/EC).

Recommendations for fault-free operation:

- The exterior antenna needs to be professionally installed to obtain the maximum range possible.
- Maximum transmission power: 10 watts.
- The mobile phone needs to be installed in a suitable spot. Consider relevant note in the Owner's manual, chapter **Airbag system**.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 watts.

Use of a hands-free attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 watts for GSM 900 or 1 watt for the other types.

For reasons of safety, do not use the phone while driving. Even use of a hands-free set can be a distraction while driving.

### **Warning**

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

**Caution**

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.



## Index

**A**

Activating AUX.....	67
Activating Bluetooth music.....	67
Activating radio.....	60
Activating the Infotainment system	54
Activating the phone portal.....	73
Activating USB.....	67
Audio files.....	65
Auto Set.....	57
Auto volume control.....	57
AUX.....	65

**B**

BACK button.....	56
Basic operation.....	56
Control panel.....	56
Bluetooth connection.....	71
Bluetooth music.....	65

**C**

Category list.....	60
Control elements	
Infotainment system.....	50
Steering wheel.....	50
Control elements overview.....	50

**D**

DAB.....	63
DAB linking.....	63
Digital audio broadcasting.....	63

**E**

Emergency call.....	72
---------------------	----

**F**

Favourite lists.....	61
Retrieving stations.....	61
Storing stations.....	61
File formats	
Audio files.....	65
Frequency list.....	60

**G**

General information.....	65, 69, 70
AUX.....	65
Bluetooth music.....	65
Infotainment system.....	48
Phone.....	70
Radio.....	60
USB.....	65

**I**

Infotainment control panel.....	50
Intellitext.....	63

**L**

Language.....	57
L-Band.....	63

**M**

Maximum startup volume.....	57
MENU knob.....	56
Menu operation.....	56

Mobile phones and CB radio  
equipment ..... 75

Mute..... 54

## O

Operation..... 73

AUX..... 67

Bluetooth music..... 67

Infotainment system..... 54

Menu..... 56

Phone..... 73

Radio..... 60

USB..... 67

## P

Pairing..... 71

### Phone

Bluetooth..... 70

Bluetooth connection..... 71

Emergency calls..... 72

General information..... 70

Handsfree mode..... 73

Phone book..... 73

Recent calls..... 73

Ringtone..... 73

Text messages..... 74

Phone book..... 73

### Phone call

Initiating..... 73

Rejecting..... 73

Taking..... 73

Playing audio..... 67

## R

### Radio

Category list..... 60

DAB..... 63

DAB announcements..... 63

DAB menu..... 63

Digital audio broadcasting..... 63

Favourite lists..... 61

FM menu..... 62

Frequency list..... 60

Intellitext..... 63

L-Band..... 63

Radio data system..... 62

RDS..... 62

Region..... 62

Regionalisation..... 62

Retrieving stations..... 61

Station list..... 60

Station search..... 60

Storing stations..... 61

TP..... 62

Traffic programme..... 62

Waveband..... 60

Radio data system (RDS) ..... 62

Region..... 62

Regionalisation..... 62

Restore factory settings..... 57

Retrieving stations..... 61

Ringtone..... 73

## S

Speech recognition..... 69

Station list..... 60

Station search..... 60

Storing stations..... 61

### Switching the Infotainment

system on..... 54

System settings..... 57

Language..... 57

Restore factory settings..... 57

Time and date..... 57

Valet mode..... 57

## T

Text messages..... 74

Theft-deterrent feature ..... 49

Time..... 57

Tone settings..... 56

TP..... 62

Traffic programme..... 62

## U

Usage..... 54, 60, 69

AUX..... 67

Bluetooth music..... 67

Infotainment system.....	54
Menu.....	56
Phone.....	73
USB.....	67
USB.....	65

## V

### Valet mode

Locking.....	57
Unlocking.....	57
Voice recognition.....	69

### Volume

Auto volume control.....	57
Maximum startup volume.....	57
Mute function.....	54
Setting the volume.....	54
Speed compensated volume....	57
Volume limitation at high temperatures.....	54
Volume settings.....	57

## W

Waveband selection.....	60
-------------------------	----



Copyright by General Motors UK Ltd.

The information contained in this publication is effective as of the date indicated below. General Motors UK Ltd. reserves the right to make changes to the technical specifications, features and design of the vehicles relative to the information contained in this publication, as well as changes to the publication itself.

Edition: January 2016, General Motors UK Ltd.

Printed on chlorine-free bleached paper.

KTA-2783-VX-en

01/2016

