

Vehicle features



Manual transmission:

 
Reverse gear:

With vehicle stationary, wait 3 seconds after depressing clutch pedal, press the release button on the selector lever and engage gear.

If the gear does not engage, set the lever to neutral, release the clutch pedal and depress again; then repeat gear selection.

Do not grind the clutch unnecessarily.

When operating, depress clutch pedal fully. Do not use the pedal as a foot rest.

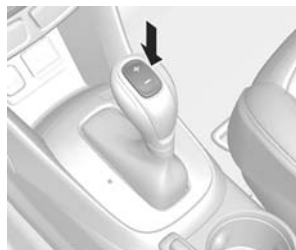

Automatic transmission, Manual mode:

Move selector lever to position **M** then press the appropriate button on the top of the selector lever to change gear.

+ = Shift to a higher gear
- = Shift to a lower gear

The mode or selected gear is shown in the transmission display.

If a higher gear is selected when vehicle speed is too low, or a lower gear is selected when vehicle speed is too high, the shift is not executed. This can cause a message in the Driver-Info-Display.

In manual mode, no automatic shifting to a higher gear takes place at high engine revolutions.



Automatic transmission:

P = Park position, wheels are locked, engage only when the vehicle is stationary and the parking brake is applied

R = Reverse gear, engage only when vehicle is stationary

N = Neutral

D = Automatic (drive) mode with all gears.

The selector lever can only be moved out of **P** when the ignition is on and the brake pedal is applied.

 


Automatic transmission (continued):

To engage **P** or **R**, press the release button. The engine can only be started with the lever in position **P** or **N**. When position **N** is selected, depress brake pedal or apply parking brake before starting.

Do not accelerate while engaging a gear. Never depress the accelerator and brake pedal at the same time.

When a gear is engaged, the vehicle slowly begins to creep when the brake is released.

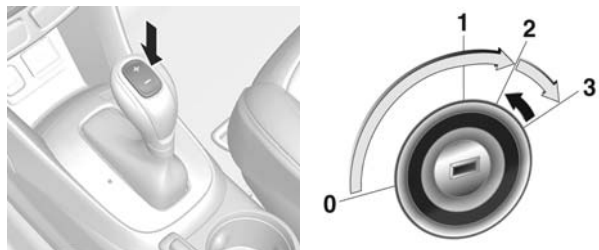

Starting the engine:

■ Turn key to position **1**

■ Move steering wheel slightly to release steering wheel lock

■ Manual transmission in neutral with clutch depressed

■ Automatic transmission in **P** or **N** with brake pedal depressed

■ Do not accelerate

■ Diesel engines: turn key to position **2** for preheating and wait for 10 to extinguish

■ Turn key to **3** and release

The key does not have to be held in position **3** - the Automatic Starter Control ensures that the system will go on starting automatically until the engine is running. Because of the checking procedure, the engine starts running after a short delay.

Stop-Start system:

When conditions allow, the system switches off the engine to save fuel and reduce emission levels if the vehicle is at a low speed or at a standstill, e.g. at traffic lights or in a traffic jam. It starts the engine as soon as the clutch is depressed.

To activate an Autostop:

■ Depress clutch pedal

■ Shift selector lever to neutral

■ Release the clutch pedal

The needle points to **AUTO STOP** in the tachometer. To restart engine, depress clutch again. Deactivate Stop-Start system manually by pressing the **eco** button on the instrument panel. The LED in the button extinguishes to confirm deactivation.

Vehicle features



 
Parking brake:

To release parking brake, raise lever slightly, press release button and lower lever fully.

Always apply parking brake firmly without operating the release button and apply as firmly as possible on an uphill or downhill slope.

To reduce the operating forces of the parking brake, depress the brake pedal at the same time.

Press button on remote control to lock.

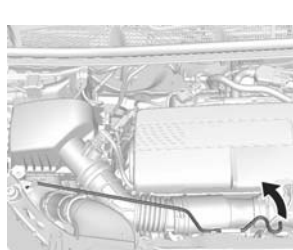

The fuel filler flap can only be opened if the vehicle is unlocked. Release the fuel filler flap by pushing the flap. To open, turn the fuel filler cap slowly to the left. The fuel filler cap can be retained in the bracket on the fuel filler flap. For refuelling, fully insert the pump nozzle and switch it on.

After the automatic cut-off, it can be topped-up with a maximum two doses of fuel. Wipe off any overflowing fuel immediately. To close, replace fuel filler cap and turn to the right until it clicks. Close the fuel filler flap and allow it to engage.

Petrol engines - use unleaded fuel meeting specifications of DIN EN 228. Diesel engines - use diesel fuel meeting specifications of DIN EN 590. Fuel tank capacity (all models) - 53 litres, except A17DTS (52 litres).

Refuelling: Before refuelling, switch off engine and any external heaters with combustion chambers (identified by sticker on fuel filler flap). Switch off any mobile phones. Fuel filler flap is located at right rear side of vehicle.

 


Unlocking and opening tailgate: Press button on remote control to unlock the tailgate. Push the touchpad switch below the tailgate moulding to open.

Closing and locking tailgate: Use interior handle on the underside of the tailgate to close. Do not push the touchpad switch below the tailgate moulding or the brand emblem whilst closing or it will unlock again.

Press button on remote control to lock.

Press button on remote control to lock.

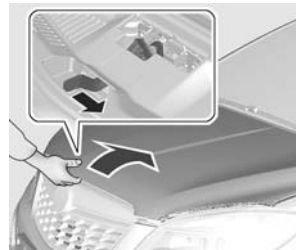

Opening the bonnet:

To open the bonnet, pull the release lever located below the instrument panel on the driver's side. The bonnet will then be unlocked and will partially open. Return release lever to its original position. To open completely, push the safety catch to the right and open the bonnet.

After the automatic cut-off, it can be topped-up with a maximum two doses of fuel. Wipe off any overflowing fuel immediately. To close, replace fuel filler cap and turn to the right until it clicks. Close the fuel filler flap and allow it to engage.

Petrol engines - use unleaded fuel meeting specifications of DIN EN 228. Diesel engines - use diesel fuel meeting specifications of DIN EN 590. Fuel tank capacity (all models) - 53 litres, except A17DTS (52 litres).

Vehicle features

Engine oil:

Check engine oil level manually on a regular basis to prevent damage to engine. Ensure that the correct specification of oil is used.

Check with vehicle on a level surface. Engine must be at operating temperature and switched off for at least 5 minutes.

Pull out dipstick, wipe clean, insert to stop on the handle, pull out and read engine oil level.

Insert dipstick to stop on handle and make half a turn.

Important:

It is the owner's responsibility to maintain the correct level of an appropriate quality oil in the engine.

Do not allow the engine oil level to drop below the minimum level!

Tyre pressure:

Check tyre pressures, including the spare, every 14 days and prior to any long journey; tyres should be checked when cold. This also applies to vehicles with tyre pressure monitoring system.

The tyre pressure data refers to cold tyres. It applies to summer and winter tyres.

Always inflate the spare tyre to the value specified for full load.

The ECO tyre pressure serves to achieve the smallest amount of fuel consumption possible.

Incorrect tyre pressures will impair safety, vehicle handling, comfort and fuel economy and increase tyre wear.

Engine	Tyre pressure (psi) Comfort setting for upto 3 people:		Tyre pressure (psi) ECO setting for upto 3 people		Tyre pressure (psi) With full load			
	Front	Rear	Front	Rear	Front	Rear		
A14NET	195/70 R16	29 29	195/70 R16	39 41	195/70 R16	39 41		
	205/70 R16	29 29	205/70 R16	39 41	205/70 R16	39 41		
	215/55 R18	32 32	215/55 R18	39 41	215/55 R18	39 41		
A16XER	195/70 R16	29 29	195/70 R16	39 41	195/70 R16	39 41		
	205/70 R16	29 29	205/70 R16	39 41	205/70 R16	39 41		
	215/55 R18	32 32	215/55 R18	39 41	215/55 R18	39 41		
A18XER	195/70 R16	29 29	195/70 R16	- ¹⁾ - ¹⁾	195/70 R16	29 32		
	205/70 R16	29 29	205/70 R16	- ¹⁾ - ¹⁾	205/70 R16	29 32		
	215/55 R18	32 32	215/55 R18	- ¹⁾ - ¹⁾	215/55 R18	29 32		
A17DTS	195/70 R16	32 32	195/70 R16	39 41	195/70 R16	39 41		
	205/70 R16	32 32	205/70 R16	39 41	205/70 R16	39 41		
	215/55 R18	34 34	215/55 R18	39 41	215/55 R18	39 41		
All	Spare wheel	61 61	All	Spare wheel	- ¹⁾ - ¹⁾	All	Spare wheel	61 61

¹⁾ Do not use ECO tyre pressure for this tyre.



 
Mokka

Quick Reference Guide

Refer to Owner's Manual for detailed information. Illustrations may depict left-hand drive vehicles. Operation is similar for right-hand drive vehicles.



Depending on the model variant, special equipment and accessories, the scope of equipment on your vehicle may differ from the descriptions in this guide.

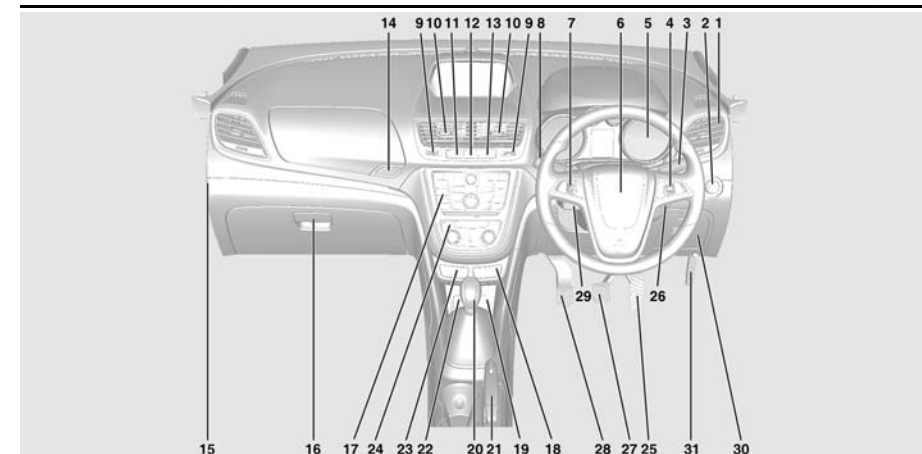

- Side air vents
- Light switch
- Wipers and washers
- Steering wheel controls
- Instruments
- Horn, driver airbag
- Cruise control, speed limiter, forward collision alert
- Turn signals, headlight flash, low beam, high beam
- Centre air vents adjustment
- Centre air vents
- Electronic Stability Control
- Hazard warning flashers
- LED for airbag deactivation
- Instrument panel storage button
- Passenger airbag deactivation
- Glovebox
- Infotainment system
- Eco button for stop-start system
- AUX input, USB input, SD card slot
- Selector lever
- Parking brake
- Power outlet
- Parking assist, descent control system
- Climate control system
- Accelerator pedal
- Ignition switch with steering wheel lock
- Brake pedal
- Clutch pedal
- Steering wheel adjustment
- Instrument panel storage
- Bonnet release lever



Unlocking the vehicle: Press button on remote control - or - turn key in driver's door lock towards the front of the vehicle to unlock the doors, load compartment and fuel filler flap.



Locking the vehicle: Close doors, load compartment and fuel filler flap. Press button on remote control - or - turn key in driver's door lock towards the rear to lock the vehicle.

 
Press twice within 15 seconds to deadlock all doors and activate the anti-theft alarm system.

The vehicle can also be configured to unlock only the driver's door, load compartment and fuel filler flap when pressing button once on the remote control. Pressing button twice will unlock the entire vehicle.

A short time after unlocking the vehicle with the remote control, the doors are locked automatically if no door has been opened.


Electronic immobiliser: Activated automatically when key is removed from ignition switch.

Vehicle features

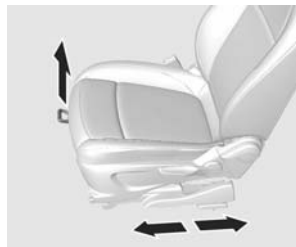

Longitudinal seat adjustment:

 Pull handle, slide seat, release handle.
Danger: Do not sit nearer than 25 cm from steering wheel, to permit safe airbag deployment.

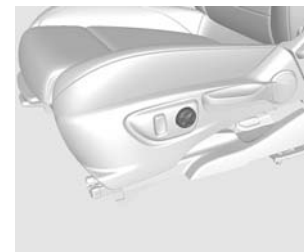

Lumbar support:

Adjust using the four-way switch to suit personal requirements.

To move support up and down: push switch up or down.

To increase and decrease support: push switch forwards or backwards.

 


Seat position:

Sit with buttocks as far back against backrest as possible.

Adjust distance between seat and pedals so that your legs are slightly angled when depressing pedals.


Slide the front passenger seat as far back as possible.

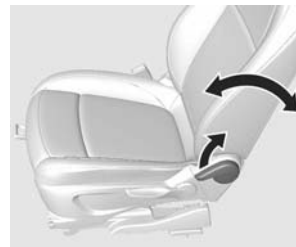

Seat backrests:


Pull lever, adjust inclination and release lever. Allow the backrest to engage audibly.

 Do not angle the backrest too far back. We recommend a maximum rake of approx. 25°.

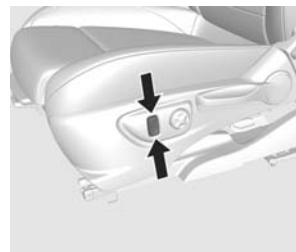

Seat inclination:

 Adjust the seat inclination by pressing the button.

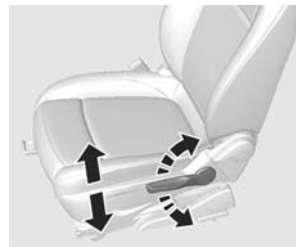

Seat height:

 
Lever pumping motion.

up = seat higher
down = seat lower



Adjustable thigh support:

Pull the lever and slide the thigh support.

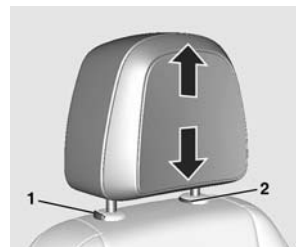

Head restraint adjustment:

Press catch 1, adjust height and engage in position. The upper edge of the head restraint should be at upper head level.

To adjust horizontally, pull the head restraint forwards. It engages in three positions.



Seat belt height adjustment:

1. Pull belt out slightly
2. Press button
3. Adjust height and engage

Adjust height so the belt lies across the shoulder. It must not lie across the throat or upper arm. Do not adjust while driving.

Vehicle features



Fitting seat belts:

Withdraw seat belt from retractor, guide it untwisted across the body and insert latch plate in belt buckle.

Tighten the lap belt regularly whilst driving by pulling the shoulder belt. Loose or bulky clothing prevents the belt from fitting snugly. Do not place objects such as handbags or mobile phones between the belt and your body.

To release belt, press red button on belt buckle.

Fasten seat belt before each trip.



Adjusting electric exterior mirrors:

Select the relevant exterior mirror by turning the control to left (L) or right (R).

Swivel the control to adjust the mirror.

In position 0, no mirror is selected.



Steering wheel adjustment:

Unlock the lever, adjust the steering wheel, then engage lever and ensure it is fully locked.

Do not adjust the steering wheel unless the vehicle is stationary and the steering wheel lock has been released.



Folding in electric exterior mirrors:

Turn control to 0, then push the control down. Both exterior mirrors will fold.

Push the control down again - both exterior mirrors return to their original position.

For pedestrian safety, exterior mirrors will swing out of their normal mounting position if they are struck with sufficient force.

Reposition the mirror before driving by applying slight pressure to the mirror housing.



Manual interior mirror:

Swivel mirror housing.

To reduce dazzle, adjust the lever on the underside of the mirror housing.

Automatic anti-dazzle interior mirror:

Dazzle from following vehicles at night is automatically reduced if the vehicle is equipped with automatic anti-dazzle interior mirror.

The lever will not be present on the underside of the mirror housing.



Power windows:

With the ignition on, power windows are operated via the switches in the door.

■ Push switch = Open window

 
■ Pull switch = Close window

Push or pull switch gently to the first detent position: Window moves up or down as long as the switch is operated.

Push or pull switch to the second detent position and then release: Window opens or closes automatically.

If the window glass encounters resistance above the middle of the window during automatic closing, it is immediately stopped and opened again.

Vehicle features

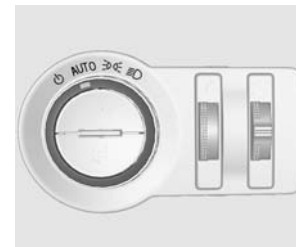

Light switch:

Turn light switch:

☉ = Activation or deactivation of automatic light control. (switch returns to **AUTO**)

AUTO = Automatic light control
Headlights are switched on and off automatically

☾☽ = Sidelights

☽☽ = Low beam or high beam

○ = Off (without **AUTO** lights)

Press button:

 
☽☽ = Front fog lights

☽☽ = Rear fog light

Turn thumb wheel:

☽☽ = Headlight range adjustment

☽☽ = Instrument panel illumination

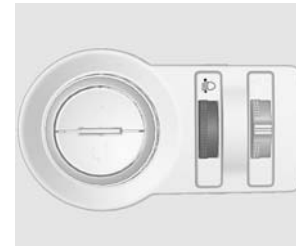

Headlight range adjustment ☽☽:

Adapt headlight range to suit the vehicle load to prevent dazzling of other road users.

Turn thumb wheel ☽☽ to required position.

■ Front seats occupied = 0

■ All seats occupied = 1

■ All seats occupied and load compartment laden = 2

■ Driver's seat occupied and load compartment laden = 3



Front fog lights:

Operated with the ☽☽ button.

Rear fog light:

Operated with the ☽☽ button.

Light switch in position **AUTO**: Switching on rear fog light will switch headlights on automatically.

Light switch in position ☽☽: Rear fog light can only be switched on with front fog lights.



Turn and lane-change signals:

Lever up = Right turn signal
Lever down = Left turn signal

If the lever is moved past the resistance point, the turn signal is switched on constantly. When the steering wheel is moved back, the turn signal is automatically deactivated.

For three flashes, e.g. when changing lanes, press the lever until resistance is felt and then release.

Move the lever to the resistance point and hold for longer indication.

Automatic light control:

When the function is switched on, with the engine running the system switches between daytime running lights and headlights, depending on external lighting conditions.

Daytime running lights:

Increases visibility of the vehicle during daylight.

Automatic headlight activation:

During poor lighting conditions the headlights are switched on.

Tunnel detection:

When a tunnel is entered the headlights are switched on automatically.

Entry lighting:

Exterior and interior lights are switched on for a short time after unlocking the vehicle with the remote control. This function only works when it is dark and facilitates location of the vehicle.

Exit lighting:

Headlights, sidelights and tail lights illuminate the surrounding area after leaving the vehicle.

Lights will switch off automatically after a short delay.



 
Operating headlight flash, high beam and low beam:

Headlight flash = Pull lever towards steering wheel

High beam = Push lever forwards

Low beam = Push lever forwards again or pull towards steering wheel

Vehicle features

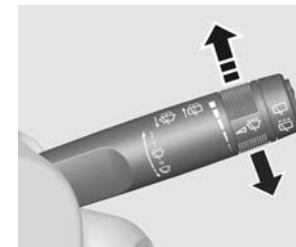

Windscreen wiper:

2 = Fast

1 = Slow

☽☽ = Adjustable timed interval wipe

○ = Off

For a single wipe when the wiper is off, press the lever down.

Vehicles with adjustable wiper interval: With wiper lever in position ☽☽, turn adjuster wheel upwards or downwards to make wiping interval shorter or longer.

Do not use wiper if the windscreen is frozen.

 
Switch wiper off in car washes.



Hazard warning flashers:

Operated with the ☽☽ button.

In the event of an accident where the airbags are deployed the hazard warning flashers are activated automatically.

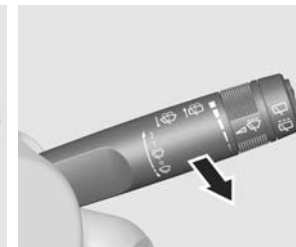

Windscreen washer:

Pull lever towards steering wheel. Washer fluid is sprayed onto the windscreen and the wiper swipes for a few strokes.



Rear window wiper/washer:

Press the rocker switch to activate the rear window wiper:

upper position = continuous operation

lower position = intermittent operation

middle position = off

Push lever to activate rear window washer. Washer fluid is sprayed onto the rear window and the wiper swipes for a few strokes.

The rear window wiper comes on automatically when the windscreen wiper is switched on and reverse gear is engaged.



Heated rear window, heated exterior mirrors ☽☽:

The heating is operated by pressing the ☽☽ button.

Heating works with the engine running and switches off automatically after a short time.

Depending on engine type, heating comes on automatically during driving when the diesel particle filter is being cleaned.



Demisting and defrosting windows ☽☽:

Press button ☽☽: Fan automatically switches to higher speed and air is directed towards the windscreen.

Set the temperature control to the highest level.

Switch cooling ☽☽ on.

Switch heated rear window ☽☽ on. Open side air vents and direct them towards the door windows.